


METAL BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

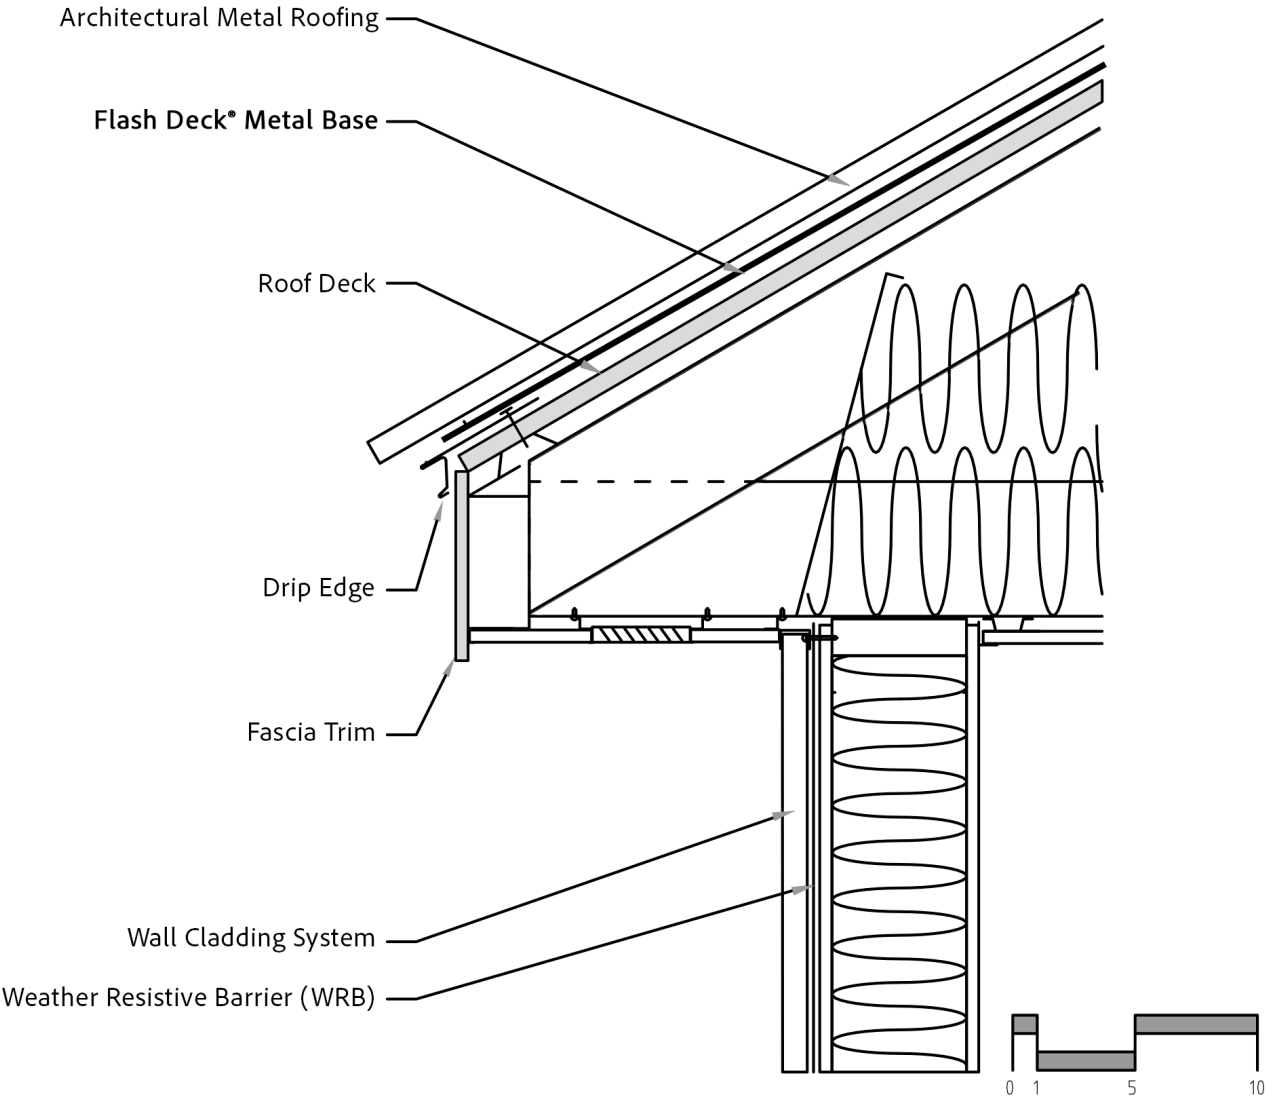

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. DRIP EDGE:** INSTALL THE DRIP EDGE ALONG THE EAVE ACCORDING TO STANDARD INDUSTRY PRACTICES.
- C. METAL BASE:** INSTALL FLASH DECK® METAL BASE DIRECTLY OVER THE DRIP EDGE NAIL FLANGE, EXTENDING IT TO THE NOSE OF THE DRIP EDGE, OR AT A MINIMUM, ENSURING IT COVERS ALL FASTENERS PLACED INTO THE DRIP EDGE NAIL FLANGE.
- D. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT ROOFERSADVANTAGE.COM TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc. 4 Valhalla Way, Wakefield, NH 03872 +1(888)-YELO-NOW (935-6669) tech@roofersadvantage.com www.roofersadvantage.com	METAL EAVE DETAIL – STANDARD FLASH DECK® METAL BASE	Drawing: MTL – 01	Get Butyl Deck Certified:
		Scale: NOT TO SCALE	
		Created: 08/01/2026	
		Supersedes: N/A	