


METAL BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

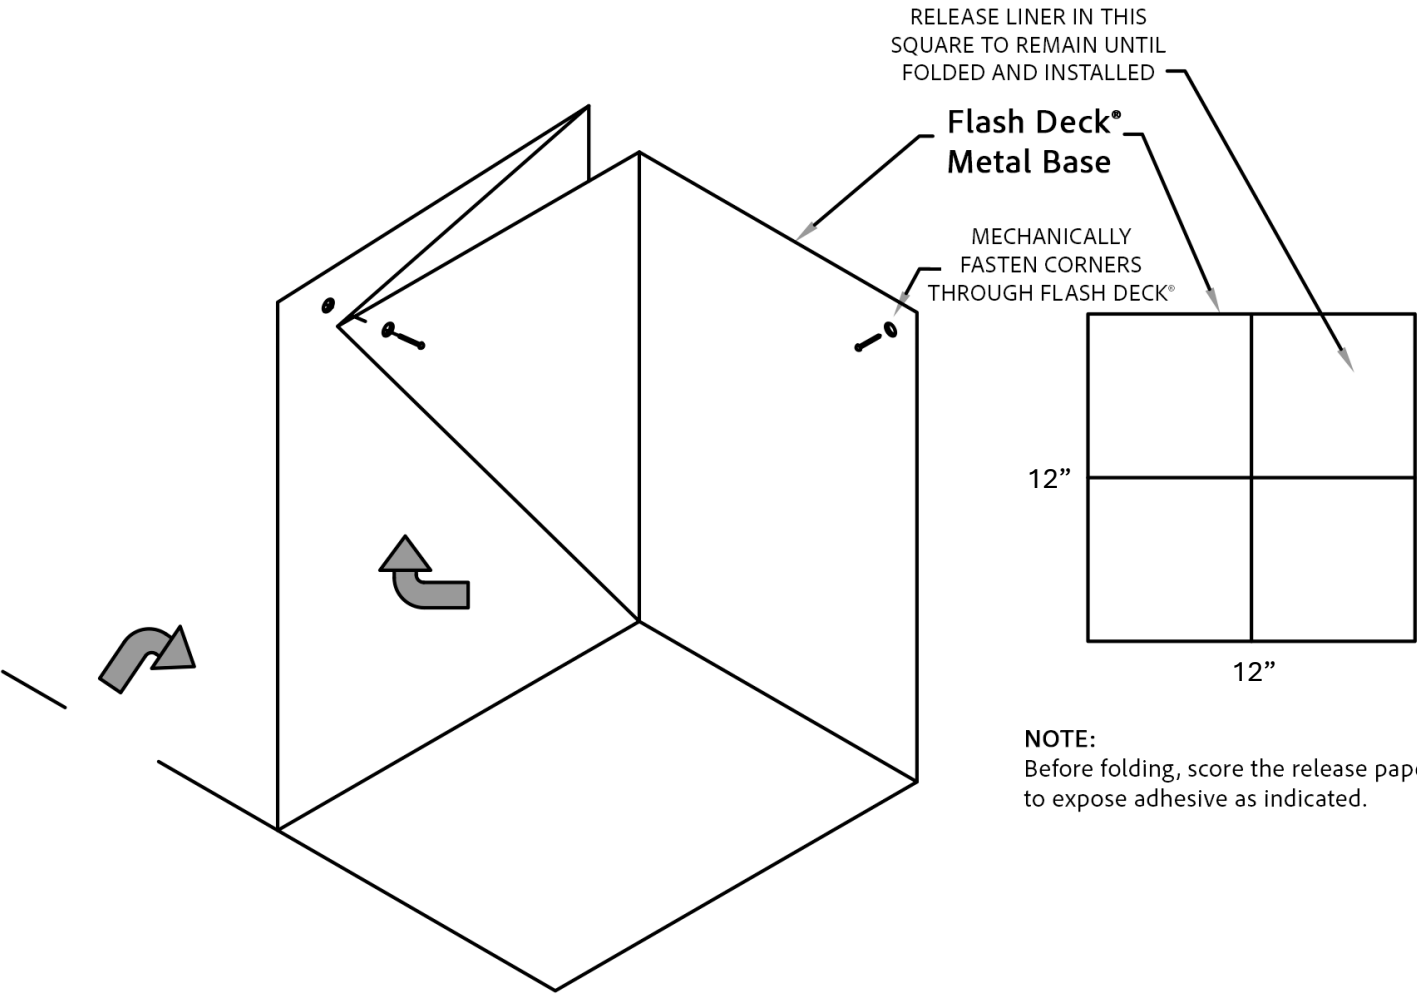

NOTE:
Before folding, score the release paper to expose adhesive as indicated.

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. INSTALLATION:** CUT 12" X 12" (305 X 305 MM) FLASH DECK® METAL BASE SQUARE; SCORE RELEASE LINER AS SHOWN. KEEP CORNER RELEASE LINER FOLDED UNTIL ANGLES ARE DETERMINED AND DETAIL IS SUBSTANTIALLY INSTALLED; OVERLAP DECK-INSTALLED METAL BASE BY A MINIMUM 4".
- C. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT ROOFERSADVANTAGE.COM TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.
4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com
www.roofersadvantage.com

INSIDE CORNER DETAIL –
WALL TO DECK
FLASH DECK® METAL BASE

Drawing: MTL – 07

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

