


METAL BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

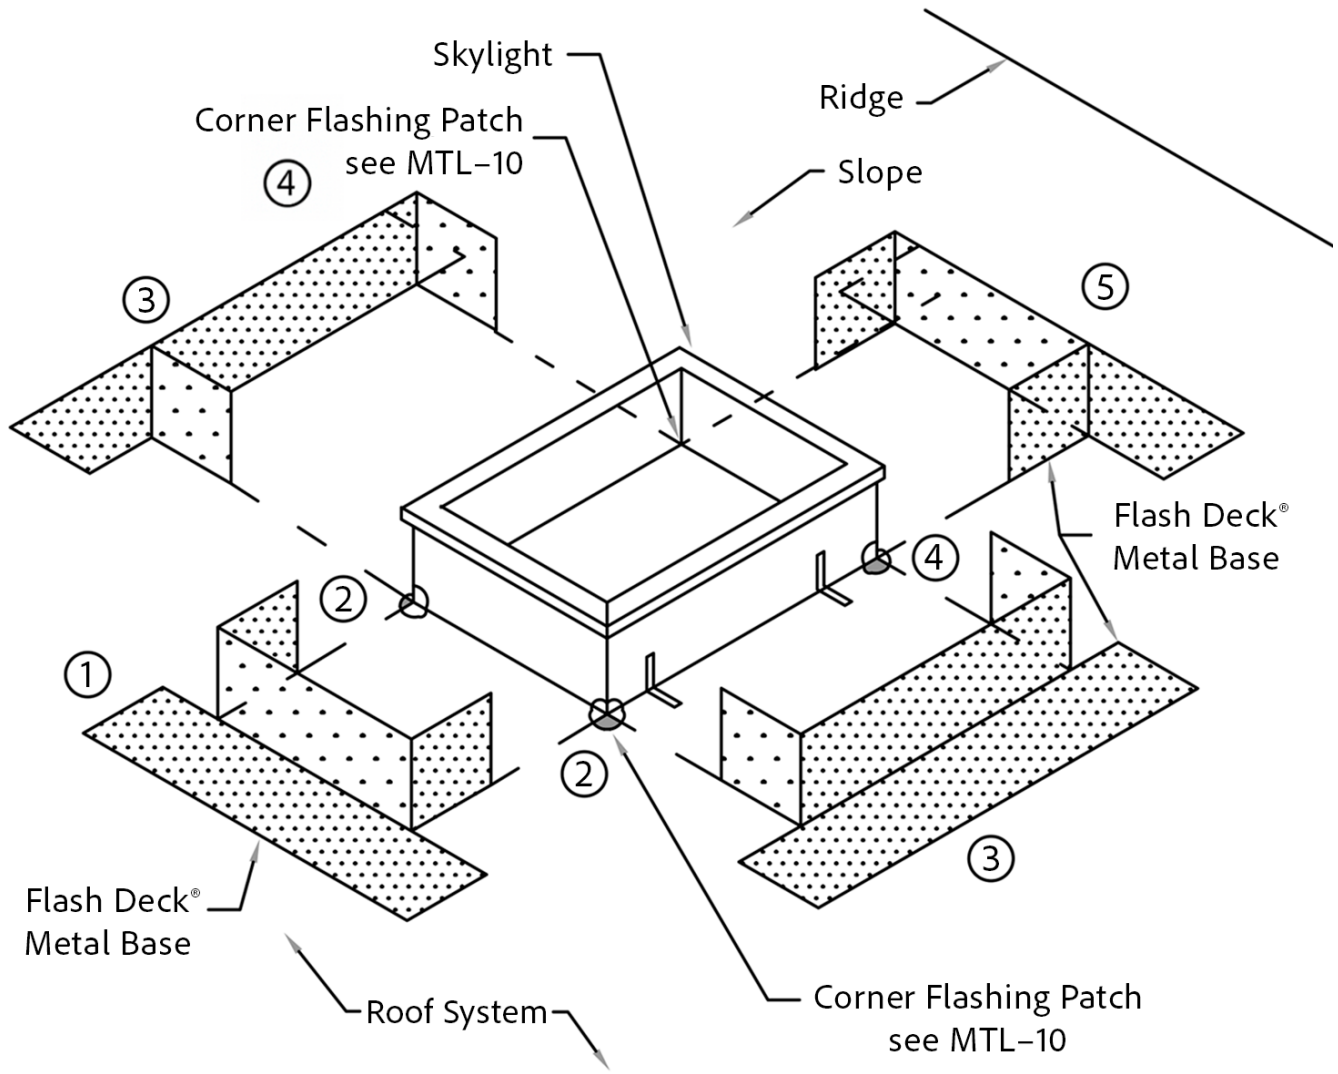

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. BASE INTEGRATION:** INSTALL FLASH DECK® METAL BASE AROUND SKYLIGHT FOLLOWING NUMBERING (1-5).
- C. CORNER HANDLING:** UTILIZE THE "CORNER FLASHING PATCH" METHOD (MTL-10) AT ALL CORNERS LAPPED ACCORDINGLY WITH NO GAPS.
- D. INSTALLATION SEQUENCE:** WORK FROM THE EAVE TO BELOW THE SKYLIGHT, COMPLETE THE SIDES, AND PROCEED FROM ABOVE THE SKYLIGHT TO THE RIDGE.
- E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.
- F. SKYLIGHT MANUFACTURER REQUIREMENTS:** INSTALLATION OF SKYLIGHT UNITS AND ASSOCIATED FLASHING MUST STRICTLY ADHERE TO THE SKYLIGHT MANUFACTURER'S INSTALLATION PROTOCOLS.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

SKYLIGHT CURB DETAIL FLASH DECK® METAL BASE

Drawing: MTL - 12

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

