


NAIL BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

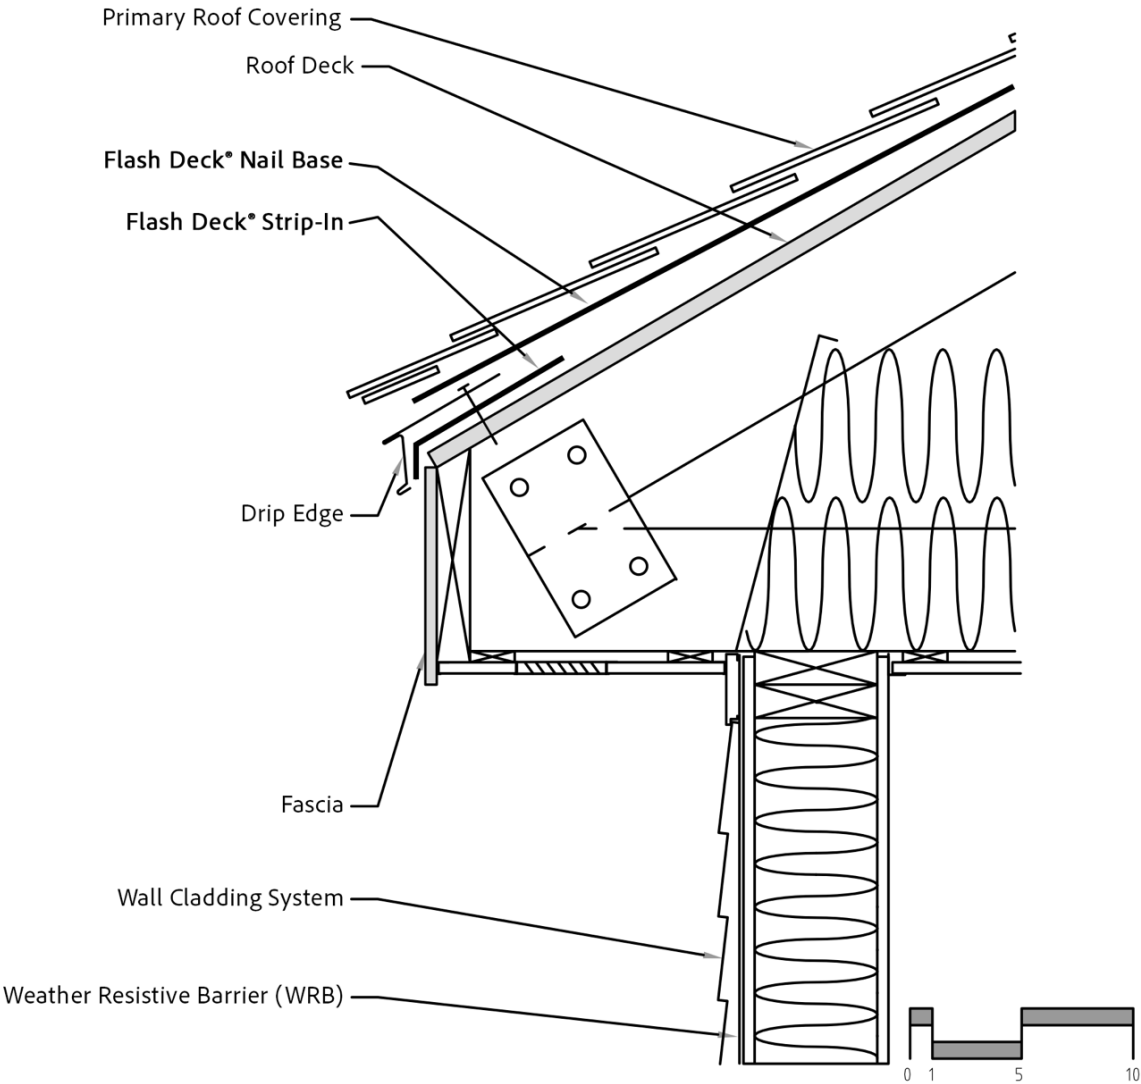

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. STRIP-IN:** INSTALL FLASH DECK® STRIP-IN DIRECTLY ONTO THE ROOF DECK, WRAPPING IT OVER THE EDGE AND ONTO THE FASCIA. ENSURE STRIP-IN REMAINS CONCEALED BEHIND THE DRIP EDGE FACE ONCE INSTALLED.
- C. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.
- D. DRIP EDGE:** INSTALL THE DRIP EDGE ONTO THE INSTALLED STRIP-IN.
- E. NAIL BASE:** APPLY FLASH DECK® NAIL BASE TO THE NOSE OF THE DRIP EDGE, ENSURING IT FULLY COVERS ALL FASTENERS

NOTICE: IN CERTAIN REGIONS, MECHANICALLY FASTENED UNDERLAYMENTS ARE INSTALLED TO THE EAVE. THIS INSTALLATION METHOD IS NOT AN ICE DAM PREVENTATIVE MEASURE, CONSULT LOCAL BUILDING CODES.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.
4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com
www.roofersadvantage.com

NAIL BASE EAVE DETAIL SHINGLE APPLICATION FLASH DECK® NAIL BASE SYSTEM

Drawing: NBS – 01
Scale: NOT TO SCALE
Created: 08/01/2026
Supersedes: N/A

Get Butyl Deck Certified:

