


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

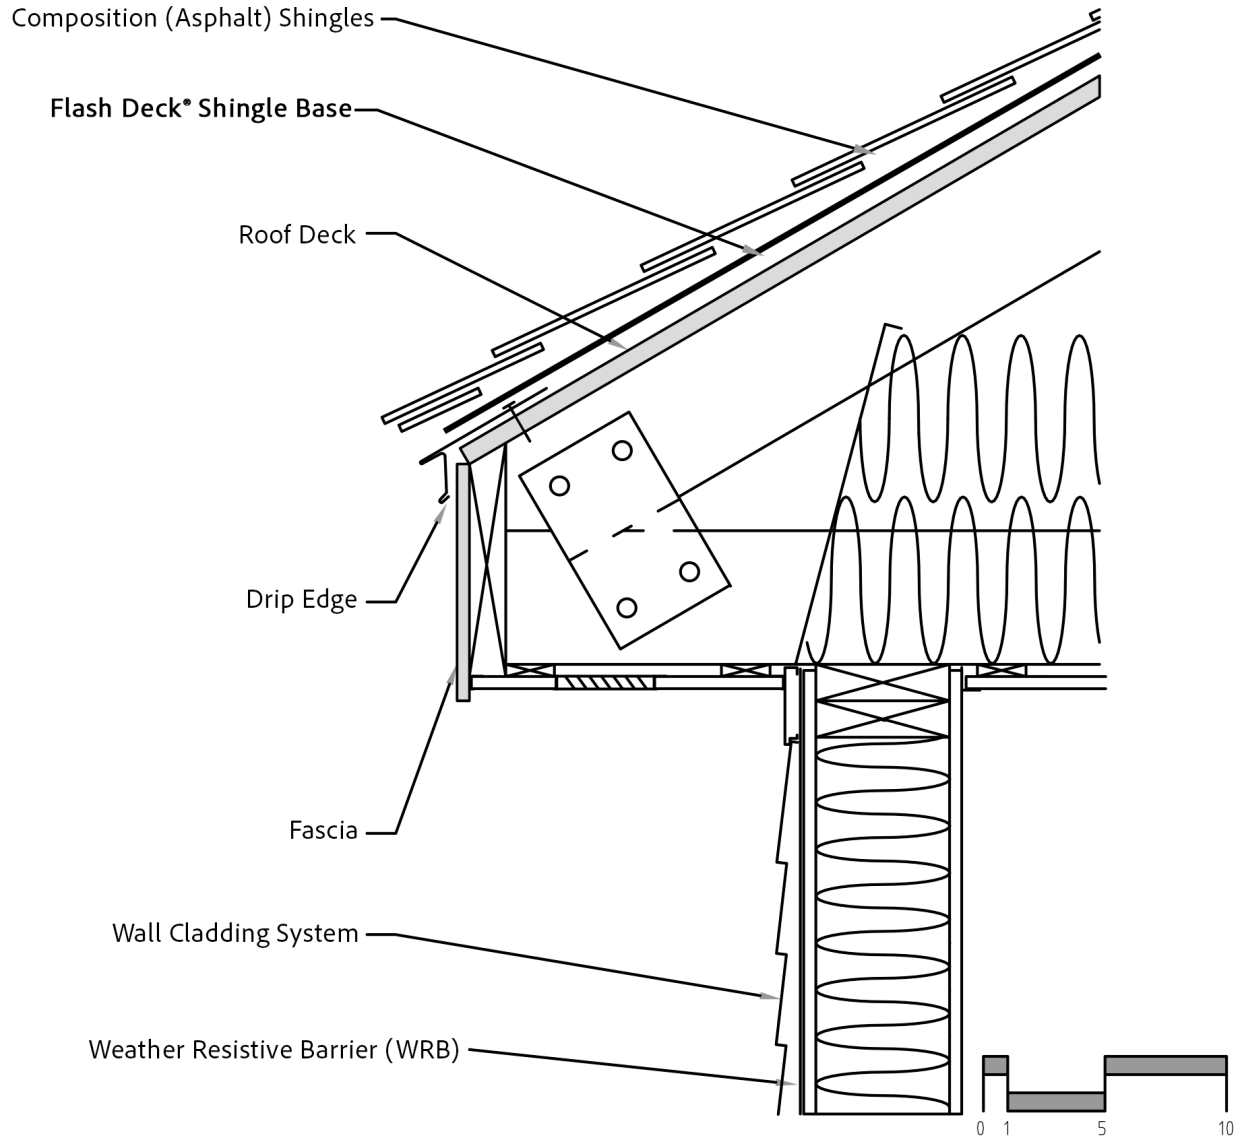

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. DRIP EDGE:** INSTALL THE DRIP EDGE ALONG THE EAVE ACCORDING TO STANDARD INDUSTRY PRACTICES.
- C. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE DIRECTLY OVER THE DRIP EDGE NAIL FLANGE, EXTENDING IT TO THE NOSE OF THE DRIP EDGE, OR AT A MINIMUM, ENSURING IT COVERS ALL FASTENERS PLACED INTO THE DRIP EDGE NAIL FLANGE.
- D. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

SHINGLE EAVE DETAIL – STANDARD FLASH DECK® SHINGLE BASE

Drawing: SHG – 01


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



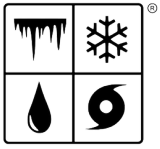

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

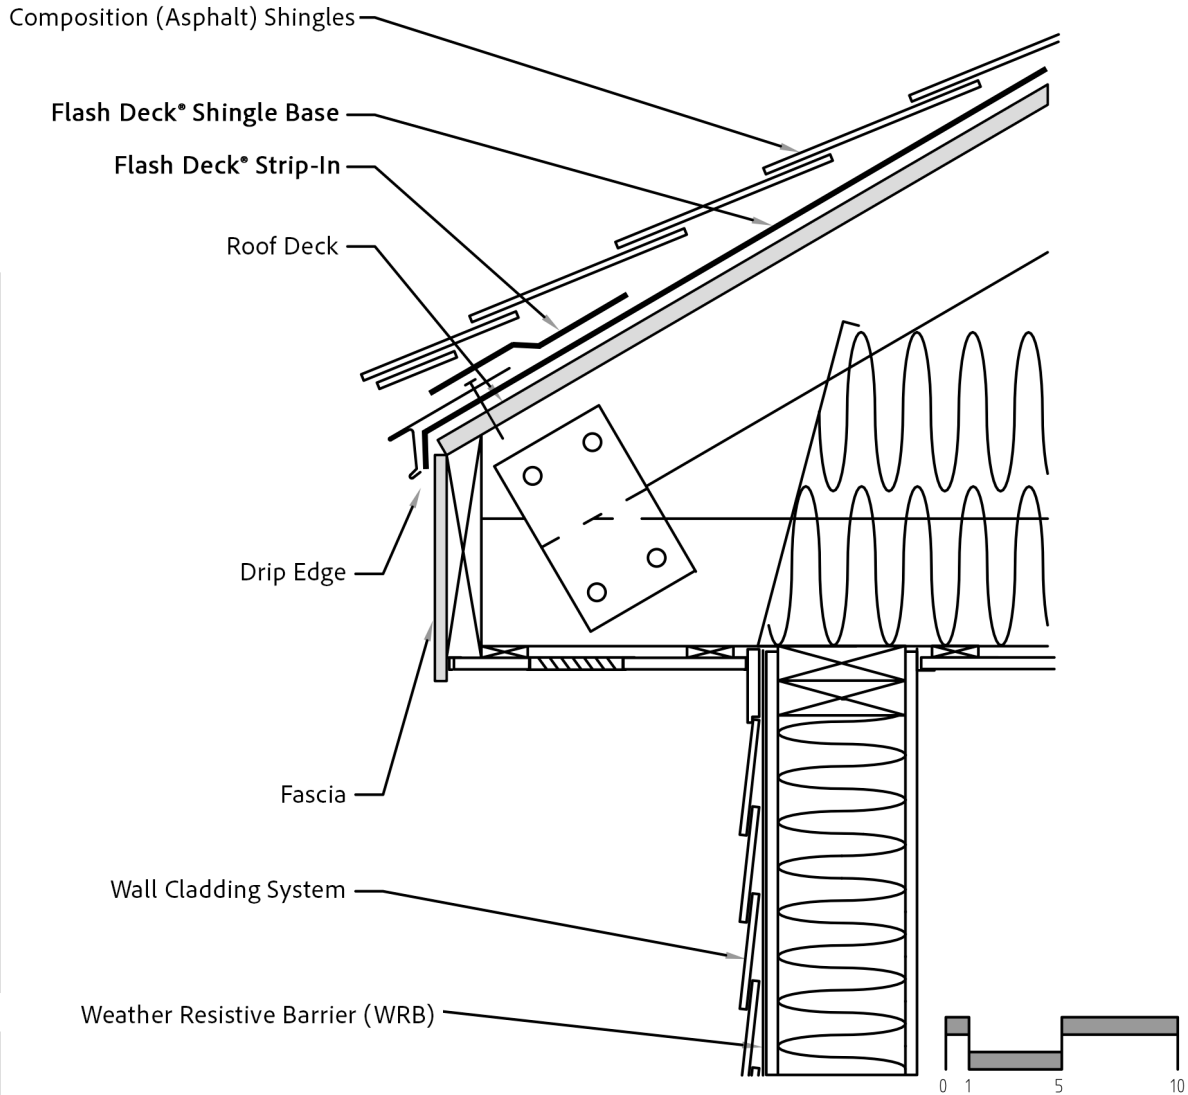

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE ONTO THE ROOF DECK. AND FASCIA, ENSURING IT REMAINS CONCEALED BEHIND THE DRIP EDGE FACE ONCE INSTALLATION IS COMPLETE.
- C. DRIP EDGE:** INSTALL THE DRIP EDGE OVER THE SHINGLE BASE.
- D. STRIP-IN:** INSTALL THE FLASH DECK® STRIP-IN STARTING FROM THE NOSE OF THE DRIP EDGE OR, AT A MINIMUM, ENSURE ALL FASTENERS ARE COVERED AND EXTENDING A MINIMUM OF 4" ONTO THE SHINGLE BASE.
- E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

SHINGLE EAVE DETAIL – ENHANCED FLASH DECK® SHINGLE BASE

Drawing: SHG – 02


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



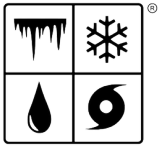

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

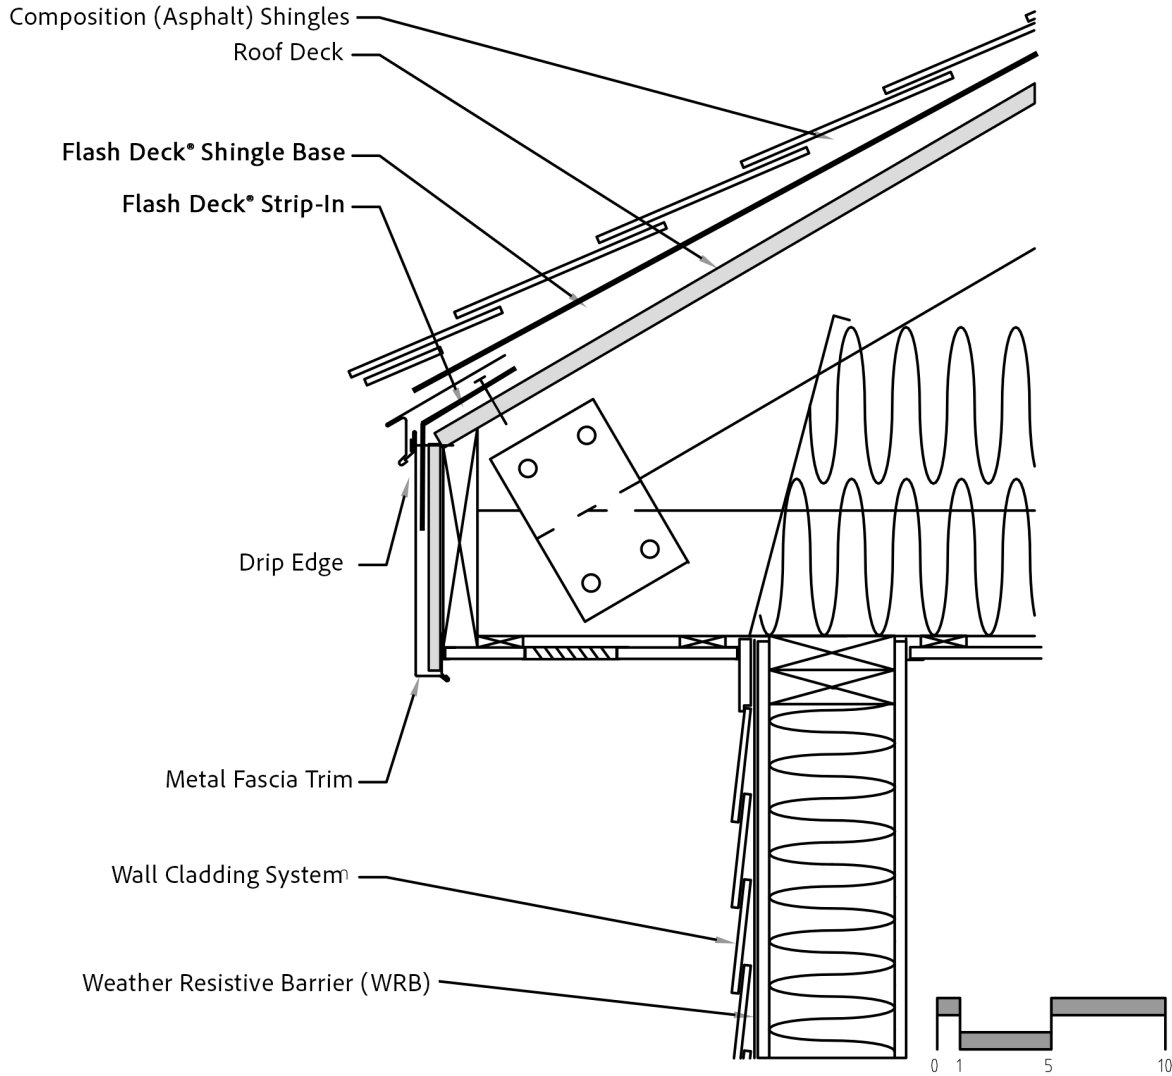

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. STRIP-IN:** INSTALL FLASH DECK® STRIP-IN DIRECTLY ONTO THE ROOF DECK, WRAPPING IT OVER THE EDGE AND ONTO THE FASCIA. ENSURE IT REMAINS CONCEALED BEHIND THE DRIP EDGE FACE ONCE INSTALLED.
- C. DRIP EDGE:** INSTALL THE DRIP EDGE ONTO THE INSTALLED STRIP-IN.
- D. SHINGLE BASE:** APPLY FLASH DECK® SHINGLE BASE ONTO THE TOP OF THE DRIP EDGE, ENSURING IT COVERS ALL FASTENERS.
- E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

SHINGLE EAVE DETAIL – SUPERIOR FLASH DECK® SHINGLE BASE

Drawing: SHG – 03


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



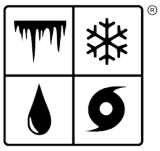

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

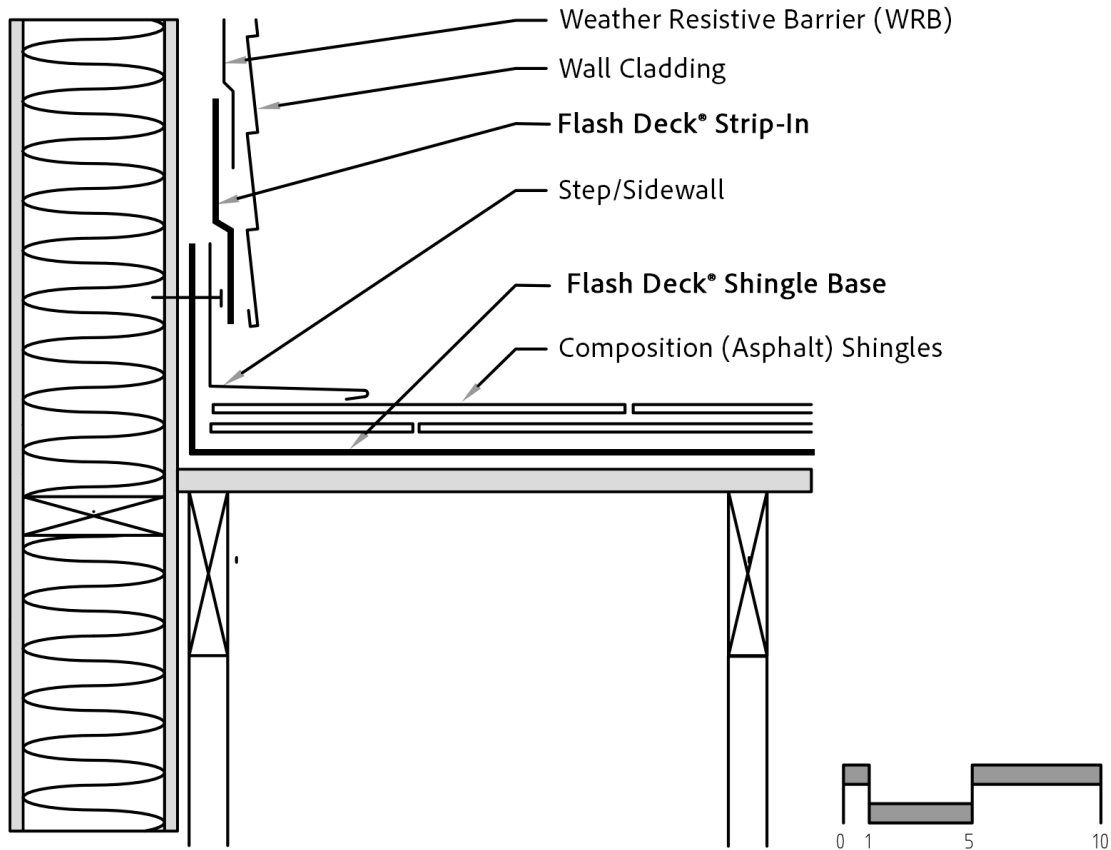

NOTES:

- A. PREPARATION:** ENSURE THE ROOF DECK AND WALL SHEATHING IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. BASE INSTALLATION:** INSTALL FLASH DECK® SHINGLE BASE UP THE VERTICAL WALL TO THE EXTENT REQUIRED BY LOCAL BUILDING CODES ENSURING SHINGLE BASE IS INSTALLED TIGHT TO THE ROOF-WALL INTERFACE.
- C. VERTICAL APPLICATION:** SHINGLE BASE CAN BE FOLDED THE LONG WAY AND INSTALLED ONTO THE DECK AND UP THE WALL.
- D. OVERLAP:** INSTALL THE SHINGLE BASE FIELD SHEET ONTO THE ROOF DECK PORTION OF THE WALL APPLICATION BY 10".
- E. INSTALL FLASHINGS:** COMPLETE THE ROOFING SYSTEM, INCLUDING VERTICAL WALL FLASHINGS.
- F. ALIGNMENT:** SNAP A CHALK LINE ONTO THE WALL FLASHING TO ENSURE FLASH DECK® STRIP-IN REMAINS HIDDEN ONCE THE FINAL SIDING IS INSTALLED.
- G. APPLICATION:** WITH A PARTNER, INSTALL THE STRIP-IN ONTO THE VERTICAL LEG ALONG THE CHALK LINE AND UP THE WALL.
- H. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

SIDEWALL TRANSITION DETAIL

FLASH DECK® SHINGLE BASE

Drawing: SHG – 04


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A



Get Butyl Deck Certified:



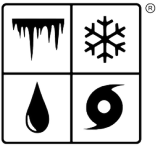

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

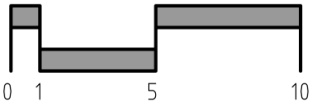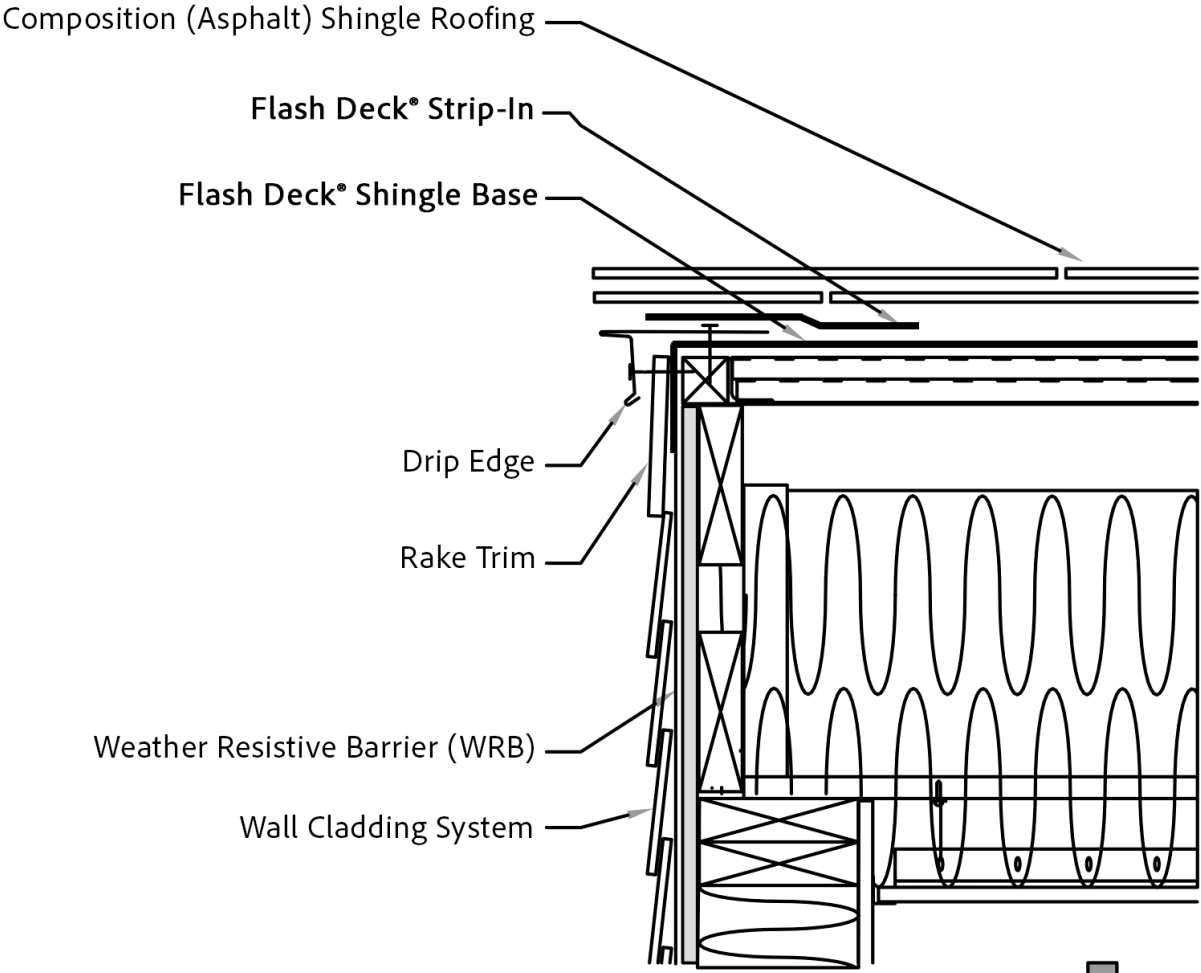


- NOTES:**
- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
 - B. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE AT RAKE EDGE, TRIMMING FLUSH OR EXTENDING ONTO RAKE TRIMS AS REQUIRED.
 - C. EXTENDED COVERAGE:** IF METAL TRIMS ARE INSTALLED DIRECTLY TO RAKE EDGE FRAMING, EXTEND SHINGLE BASE A MINIMUM OF 4" TO 6" ONTO FRAMING MEMBER, THEN CAP WITH METAL RAKE EDGE TRIM.
 - D. DRIP EDGE:** INSTALL DRIP EDGE OR RAKE EDGE TRIM DIRECTLY OVER SHINGLE BASE.
 - E. OPTIONAL ENHANCEMENT:** APPLY FLASH DECK® STRIP-IN OVER THE DRIP EDGE NAIL FLANGE TO ENSURE ALL FASTENERS ARE FULLY ENCAPSULATED.
 - F. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT ROOFERSADVANTAGE.COM TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.


GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc. 4 Valhalla Way, Wakefield, NH 03872 +1(888)-YELO-NOW (935-6669) tech@roofersadvantage.com www.roofersadvantage.com	RAKE EDGE DETAIL— NEW TRIM FLASH DECK® SHINGLE BASE	Drawing: SHG – 05	Get Butyl Deck Certified:
		Scale: NOT TO SCALE	
		Created: 08/01/2026	
		Supersedes: N/A	

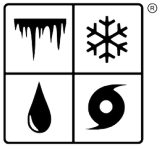

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

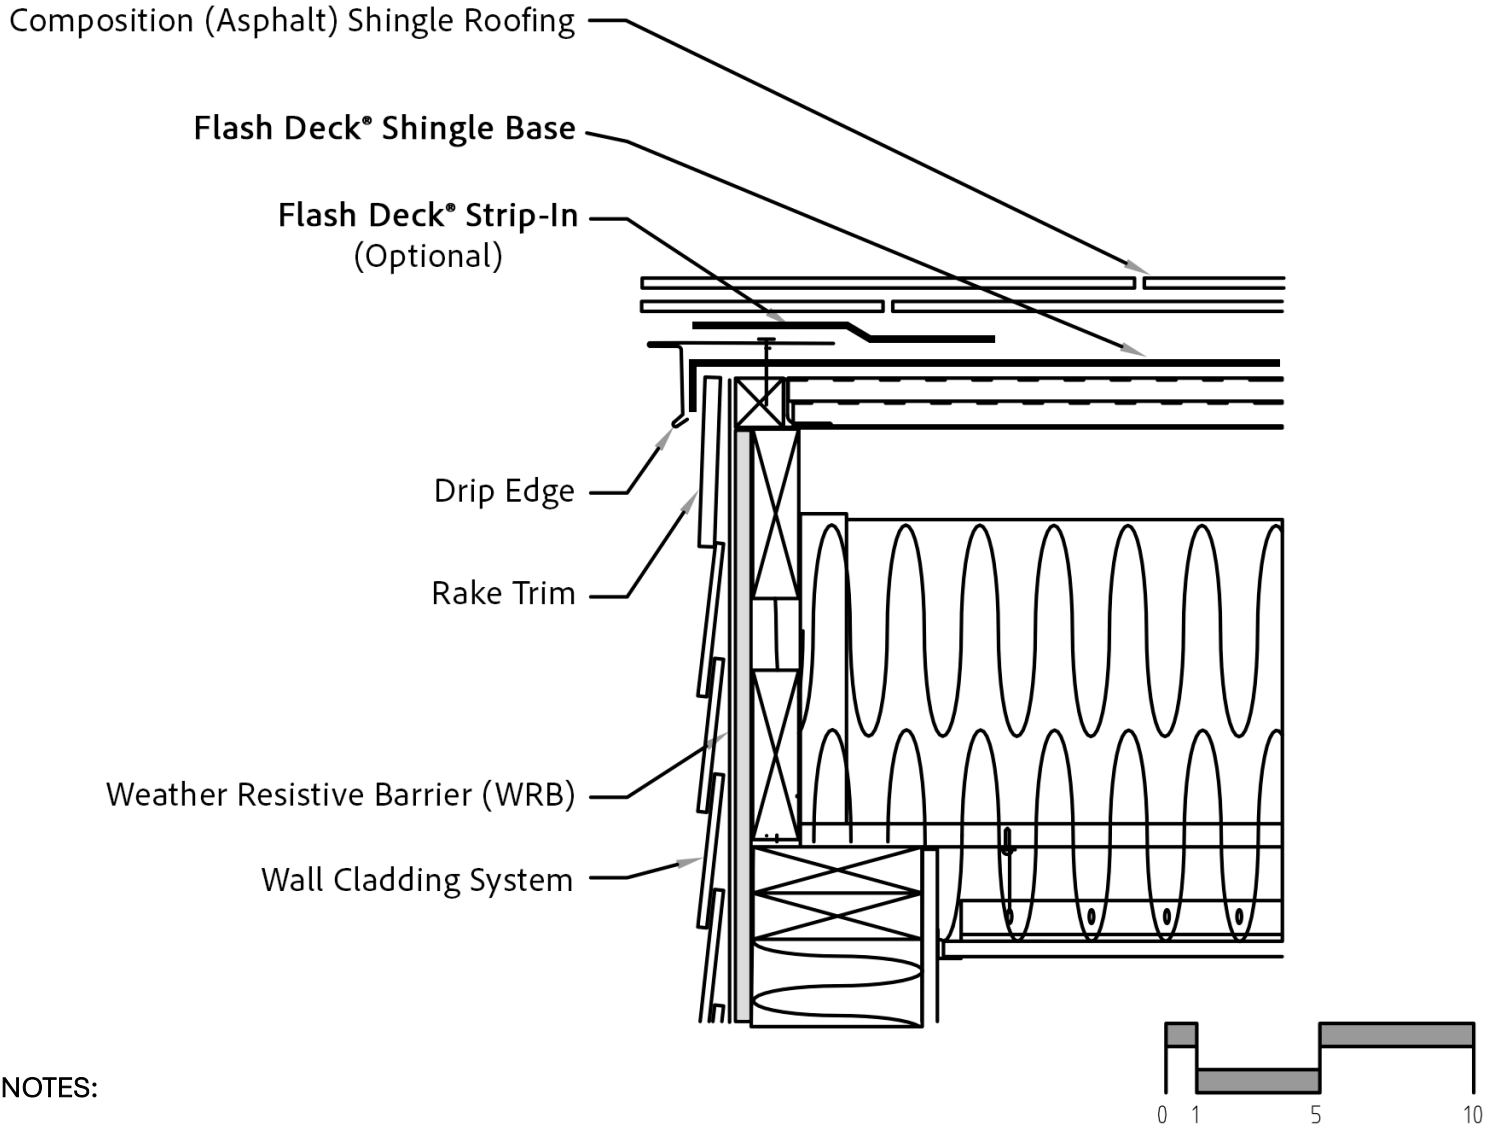

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE TO RAKE EDGE, TRIMMING FLUSH OR EXTENDING ONTO FACE OF RAKE TRIMS.
- C. DRIP EDGE:** INSTALL DRIP EDGE DIRECTLY OVER SHINGLE BASE.
- D. OPTIONAL ENHANCEMENT:** APPLY FLASH DECK® STRIP-IN OVER DRIP EDGE NAIL FLANGE; FULLY ENCAPSULATE ALL FASTENERS.
- E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

RAKE EDGE DETAIL – EXISTING TRIM

FLASH DECK® SHINGLE BASE

Drawing: SHG – 06


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



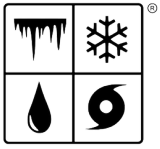

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

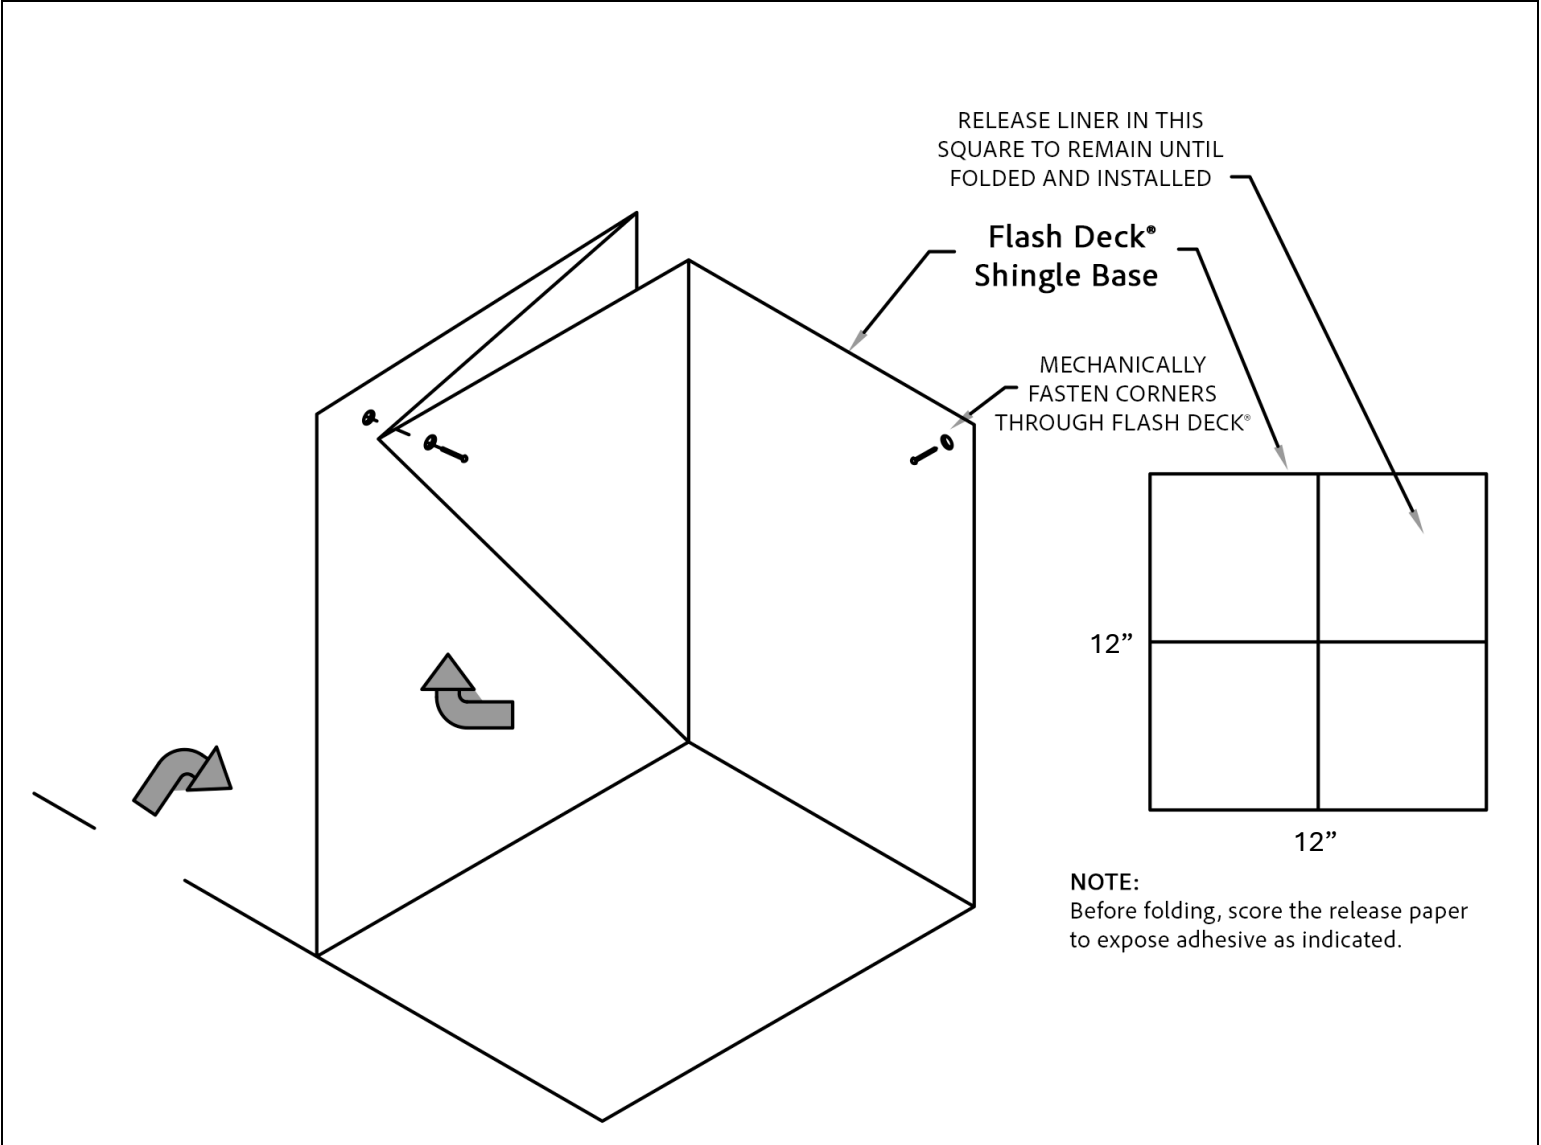


NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. INSTALLATION:** CUT 12" X 12" (305 X 305 MM) FLASH DECK® SHINGLE BASE SQUARE; SCORE RELEASE LINER AS SHOWN. KEEP CORNER RELEASE LINER FOLDED UNTIL ANGLES ARE DETERMINED AND DETAIL IS SUBSTANTIALLY INSTALLED; OVERLAP DECK-INSTALLED SHINGLE BASE BY MINIMUM OF 4".
- C. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT ROOFERSADVANTAGE.COM TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.


GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc. 4 Valhalla Way, Wakefield, NH 03872 +1(888)-YELO-NOW (935-6669) tech@roofersadvantage.com www.roofersadvantage.com	INSIDE CORNER DETAIL— WALL TO DECK FLASH DECK® SHINGLE BASE	Drawing: SHG – 07	Get Butyl Deck Certified:
		Scale: NOT TO SCALE	
		Created: 08/01/2026	
		Supersedes: N/A	

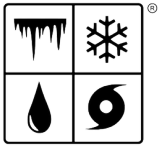

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

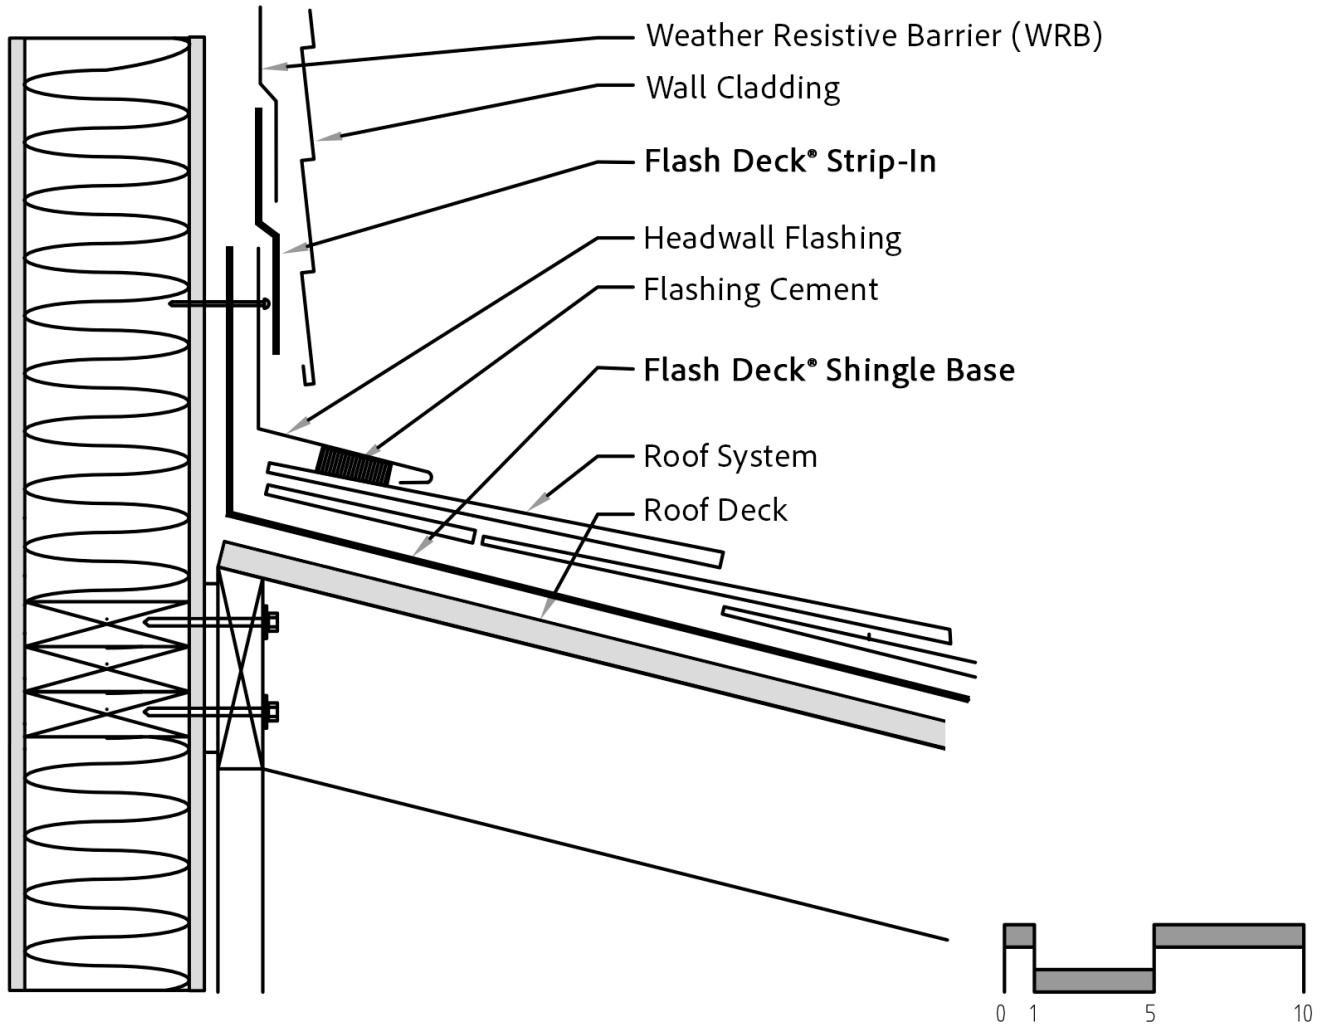

NOTES:

- A. PREPARATION:** ENSURE THE ROOF DECK AND WALL SHEATHING IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. TRANSITION:** INSTALL FLASH DECK® SHINGLE BASE UP THE VERTICAL WALL AS REQUIRED BY CODE, ENSURING A SMOOTH TRANSITION FROM ROOF DECK TO WALL SUBSTRATE.
- C. INSTALL FLASHINGS:** COMPLETE THE ROOFING SYSTEM, INCLUDING HEADWALL FLASHING.
- D. ALIGNMENT:** SNAP CHALK LINE ONTO HEADWALL FLASHING ABOVE ANY VISIBLE SIDING COMPONENTS.
- E. STRIP-IN:** WITH PARTNER, INSTALL FLASH DECK® STRIP-IN ONTO VERTICAL LEG ALONG CHALK LINE AND UP WALL.
- F. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER ACROSS THE ENTIRE AREA TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

HEADWALL DETAIL

FLASH DECK® SHINGLE BASE

Drawing: SHG – 08


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



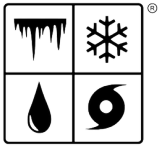

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

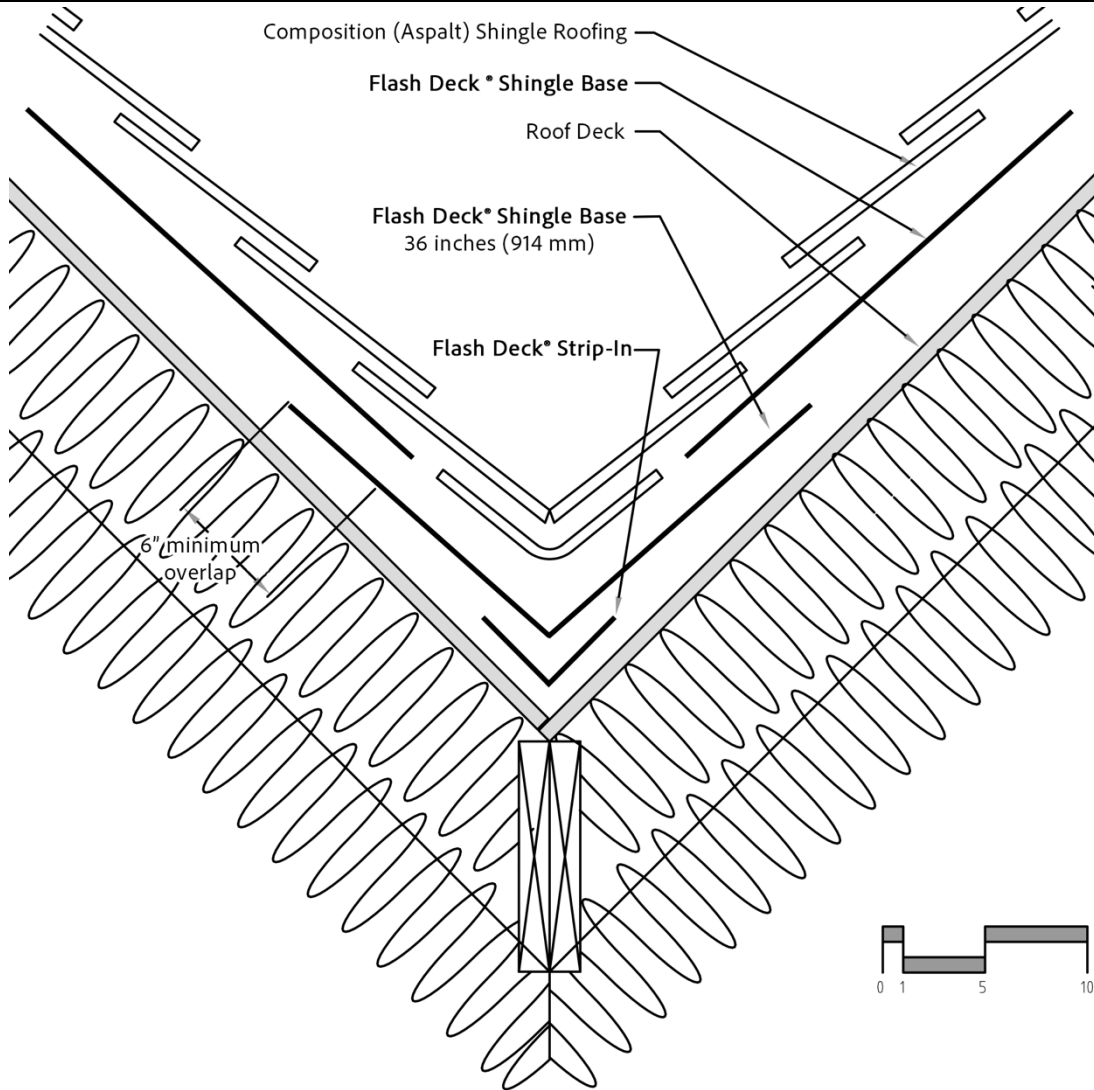

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. SEQUENCE:** INSTALL FLASH DECK® STRIP-IN PRIOR TO FLASH DECK® SHINGLE BASE.
- C. CUT AND FIT:** CUT TO MANAGEABLE LENGTHS. WORK WITH SECOND INSTALLER TO ADHERE FROM EAVE UP TOWARD RIDGE; ENSURE 6" MINIMUM OVERLAP AT EACH JOINT. SECOND INSTALLER REMOVES RELEASE LINER WHILE INSTALLER AT EAVE ROLLS MATERIAL INTO PLACE.
- D. VALLEY ALIGNMENT:** WORKING WITH A PARTNER, CUT SHINGLE BASE TO A MANAGEABLE LENGTH. FOLD SHINGLE BASE IN HALF THE LONG WAY AND REMOVE THE SPLIT RELEASE LINER FROM ONE SIDE; SLIDE INTO THE VALLEY.
- E. SHINGLE BASE APPLICATION:** INSTALL ONE SIDE FIRST, THEN INSTALL THE OTHER SIDE, ROLLING FIRMLY INTO PLACE ONTO THE STRIP-IN TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

VALLEY DETAIL

FLASH DECK® SHINGLE BASE

Drawing: SHG – 09


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:




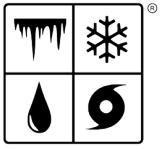


SHINGLE BASE
BUTYL DECK SYSTEM | INSTALLATION DETAILS





PATCH "A"

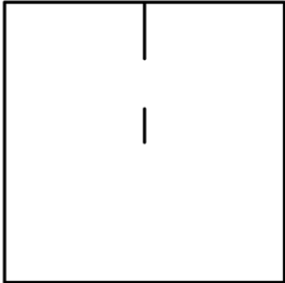


PATCH "B"

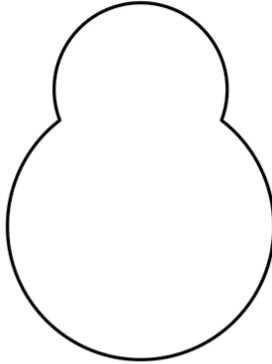


PATCH "C"

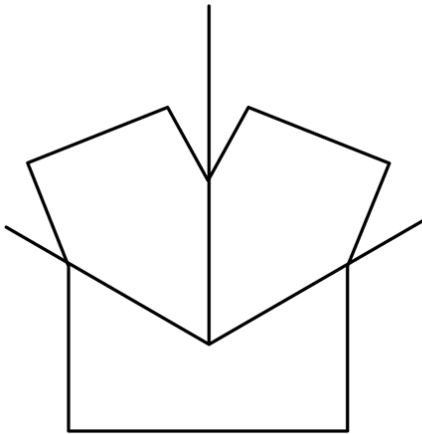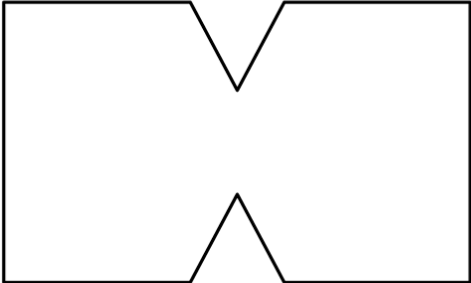

PATCH "A"
INSTALLED AT CORNER

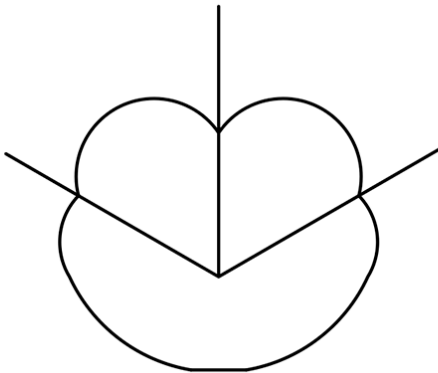

PATCH "B"
INSTALLED AT CORNER

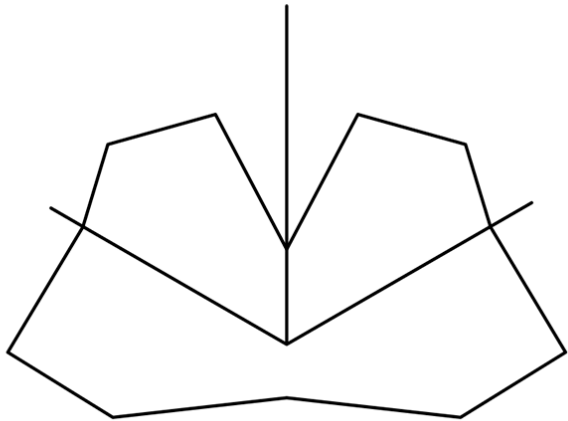

PATCH "C"
INSTALLED AT CORNER

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. PATCH PREP:** THE NORMAL PATCH SIZE IS 6" X 6" (150 BY 150 MM); IN SEVERE WEATHER REGIONS, PATCH SIZE SHOULD BE 12" X 12" (305 BY 305 MM).
- C. APPLICATION:** APPLY OVER THE CORNER TRANSITION, WORKING THE MATERIAL INTO THE PROFILE TO AVOID VOIDS.
- D. RELEASE LINER:** REMOVE RELEASE LINER AT TIME OF INSTALLATION. **E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

CORNER FLASHING
PATCH DETAIL
FLASH DECK® SHINGLE BASE

Drawing: SHG – 10


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



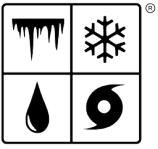

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

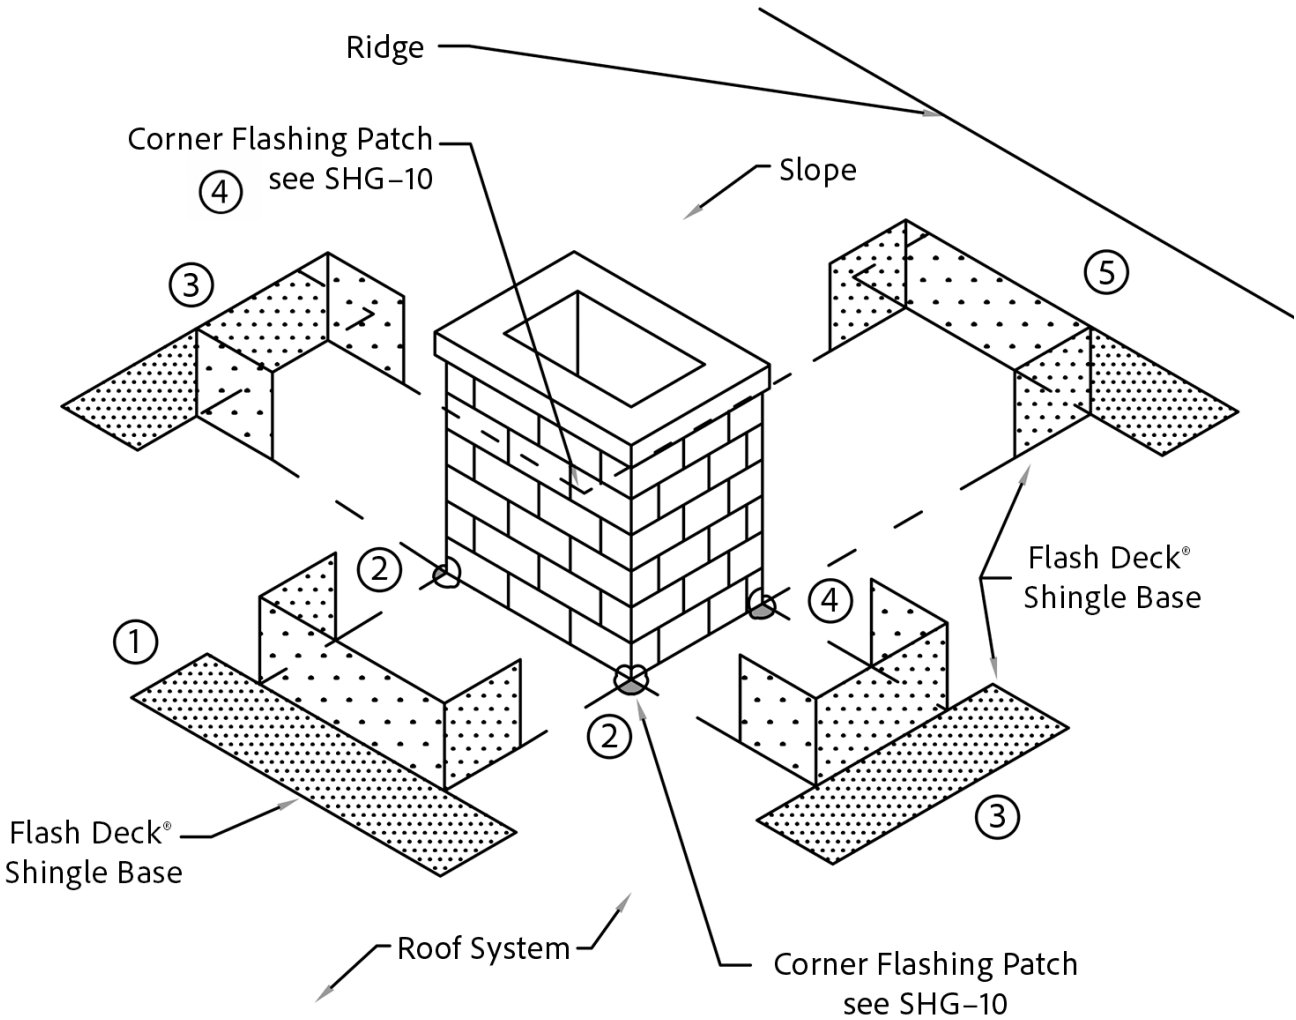


NOTES:

- A. PREPARATION:** ENSURE THE ROOF DECK AND WALL SHEATHING IS CLEAN, DRY, AND FREE OF DEBRIS. ON MASONRY CHIMNEYS, BRICKS MUST BE CLEAN AND DRY.
- B. BASE INTEGRATION:** INSTALL FLASH DECK® SHINGLE BASE AROUND CHIMNEY BASE, FOLLOW NUMBERING (1-5).
- C. CORNER HANDLING:** UTILIZE THE "CORNER FLASHING PATCH" METHOD (SHG-10) AT ALL CHIMNEY CORNERS LAPPED ACCORDINGLY WITH NO GAPS.
- D. CAULKING/SEALANT:** APPLY CAULKING/SEALANT ALONG TOP EDGE AND CORNERS OF SHINGLE BASE.
- E. STRIP-IN:** ON WOOD FRAME CONSTRUCTION, APPLY FLASH DECK® STRIP-IN ONTO VERTICAL LEG OF FLASHINGS, EXTENDING UP CHIMNEY SURFACE. OVERLAP DETAIL WITH WEATHER-RESISTIVE BARRIER (WRB).
- F. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.


GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc. 4 Valhalla Way, Wakefield, NH 03872 +1(888)-YELO-NOW (935-6669) tech@roofersadvantage.com www.roofersadvantage.com	CHIMNEY FLASHING DETAIL FLASH DECK® SHINGLE BASE	Drawing: SHG – 11	Get Butyl Deck Certified:
		Scale: NOT TO SCALE	
		Created: 08/01/2026	
		Supersedes: N/A	

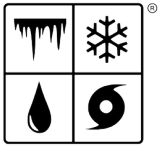

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

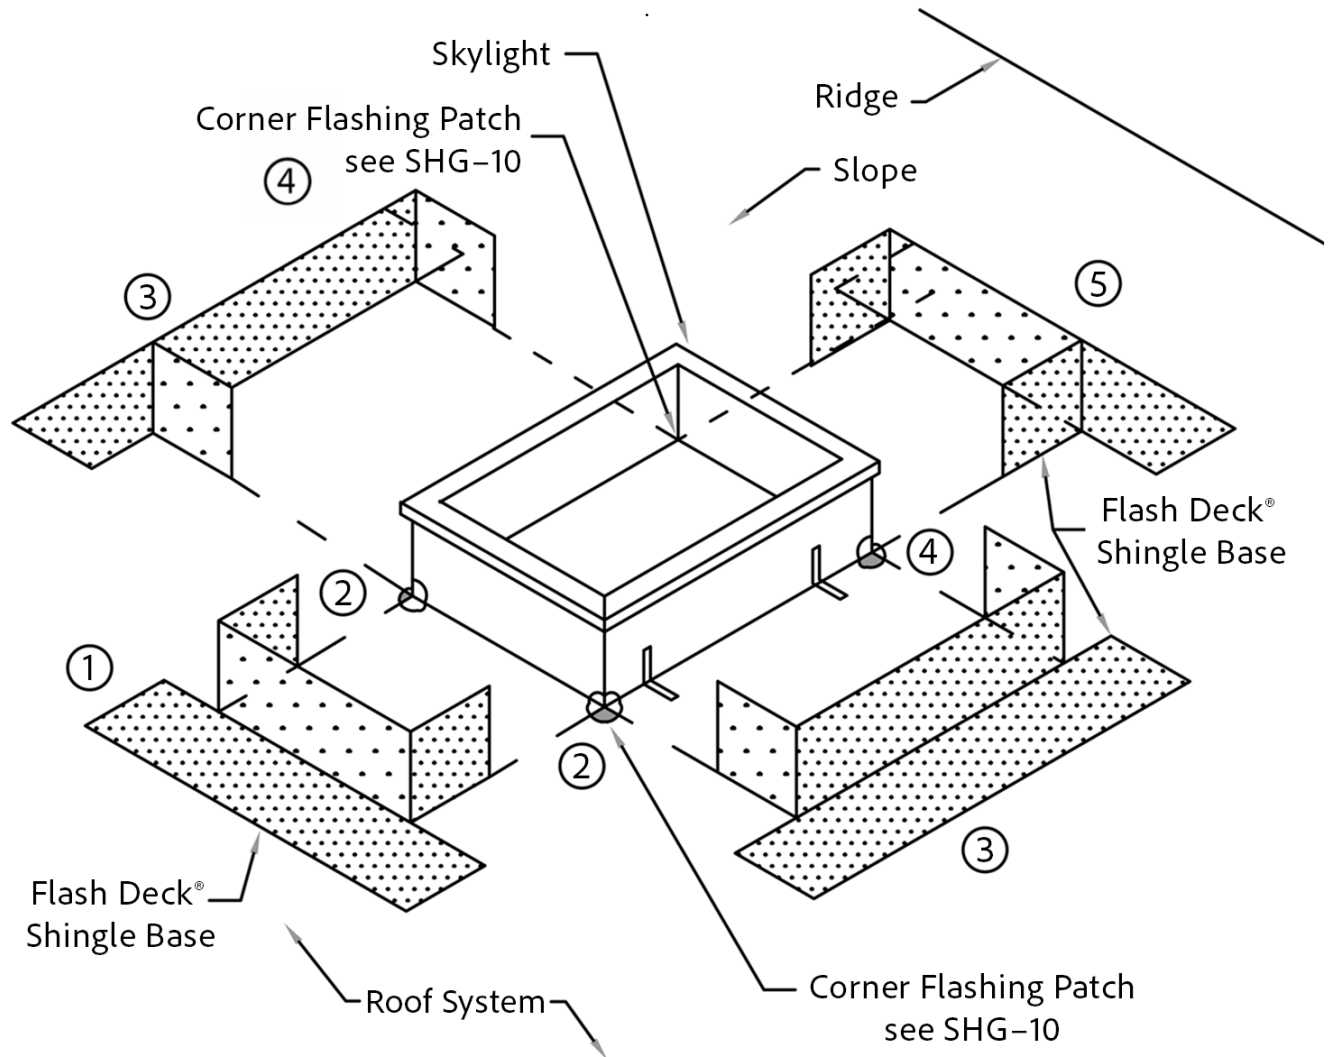

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. BASE INTEGRATION:** INSTALL FLASH DECK® SHINGLE BASE AROUND SKYLIGHT FOLLOWING NUMBERING (1-5).
- C. CORNER HANDLING:** UTILIZE THE "CORNER FLASHING PATCH" METHOD (SHG-10) AT ALL CORNERS LAPPED ACCORDINGLY WITH NO GAPS.
- D. INSTALLATION SEQUENCE:** WORK FROM THE EAVE TO BELOW THE SKYLIGHT, COMPLETE THE SIDES, AND PROCEED FROM ABOVE THE SKYLIGHT TO THE RIDGE.
- E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.
- F. SKYLIGHT MANUFACTURER REQUIREMENTS:** INSTALLATION OF SKYLIGHT UNITS AND ASSOCIATED FLASHING MUST STRICTLY ADHERE TO THE SKYLIGHT MANUFACTURER'S INSTALLATION PROTOCOLS.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

SKYLIGHT CURB DETAIL FLASH DECK® SHINGLE BASE

Drawing: SHG - 12


Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A


Get Butyl Deck Certified:



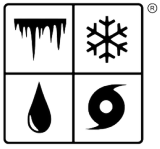

SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

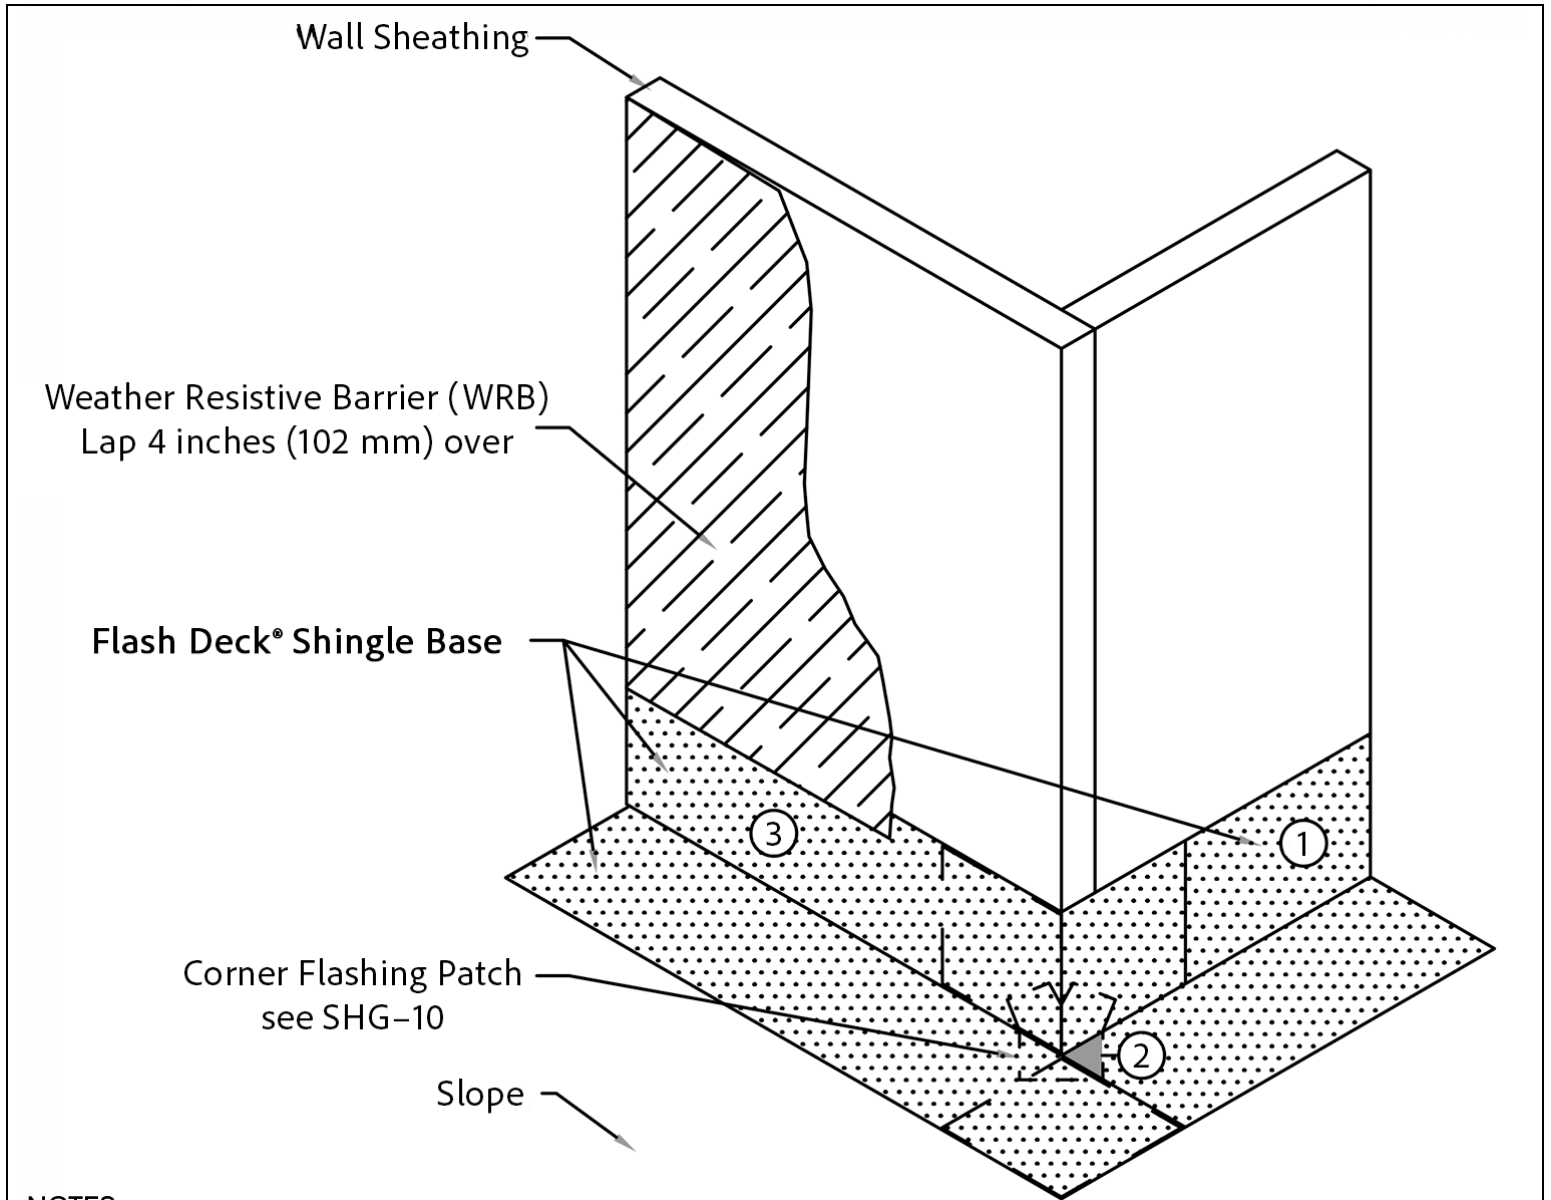

NOTES:

- A. PREPARATION: ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. INSTALLATION: INSTALL FLASH DECK® SHINGLE BASE IN ORDER AS SHOWN BY NUMBERS.
- C. REINFORCEMENT: ALL LAPS MUST BE INSTALLED IN A WATER-SHEDDING MANNER (SHINGLE FASHION).
- D. CAULKING/SEALANT: APPLY CAULKING/SEALANT ALONG TOP EDGE AND CORNERS OF SHINGLE BASE.
- E. BONDING: APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

OUTSIDE CORNER DETAIL – WALL TO DECK FLASH DECK® SHINGLE BASE

Drawing: SHG – 13

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

