


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

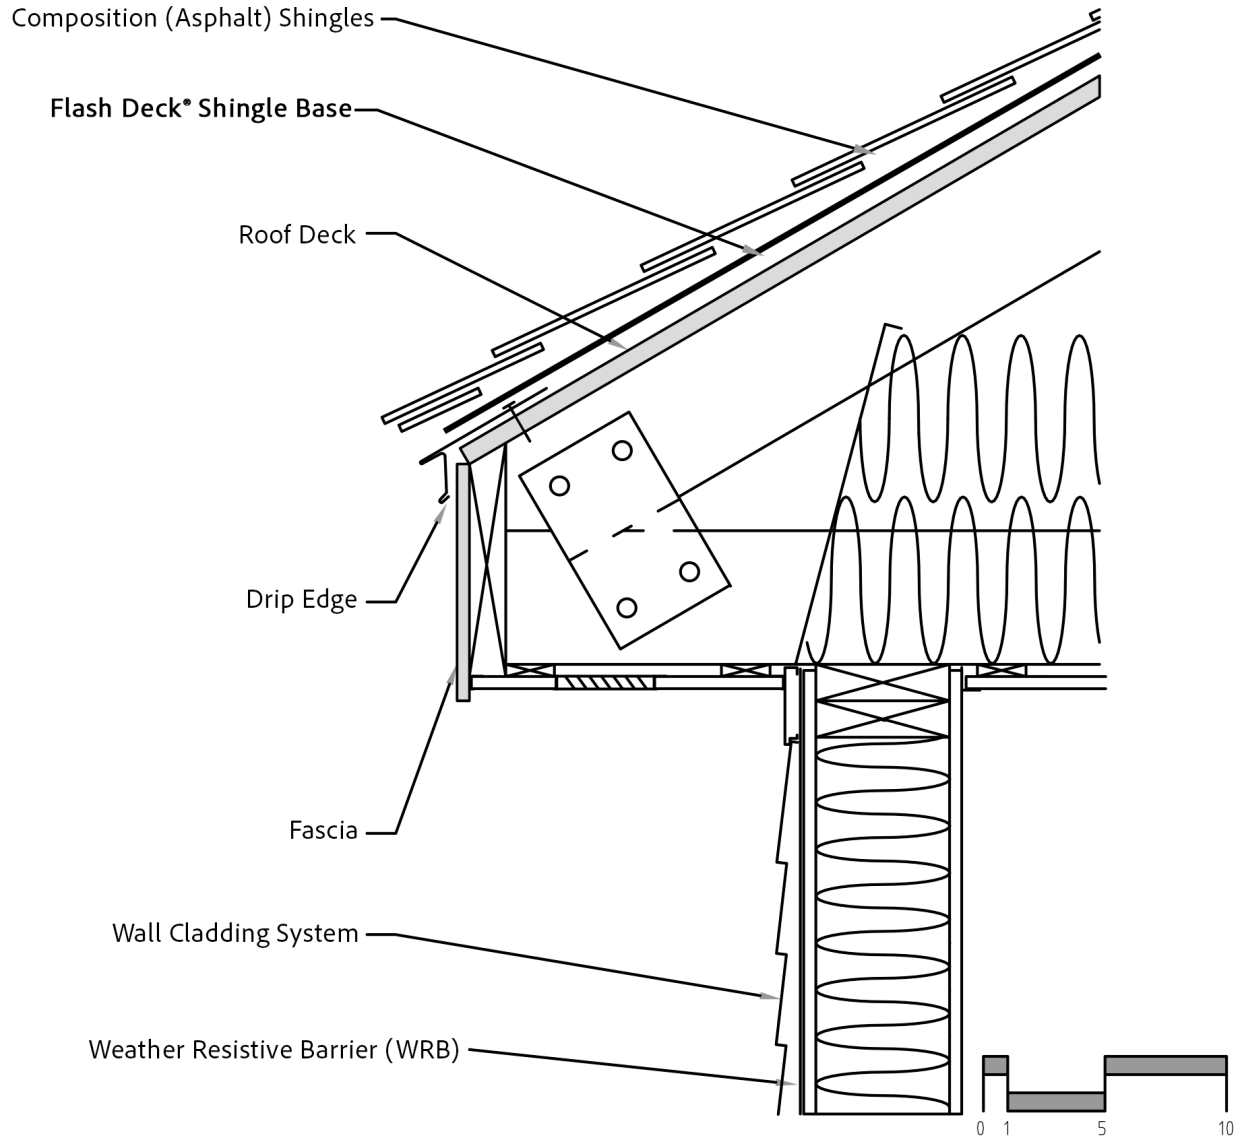

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. DRIP EDGE:** INSTALL THE DRIP EDGE ALONG THE EAVE ACCORDING TO STANDARD INDUSTRY PRACTICES.
- C. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE DIRECTLY OVER THE DRIP EDGE NAIL FLANGE, EXTENDING IT TO THE NOSE OF THE DRIP EDGE, OR AT A MINIMUM, ENSURING IT COVERS ALL FASTENERS PLACED INTO THE DRIP EDGE NAIL FLANGE.
- D. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

SHINGLE EAVE DETAIL – STANDARD FLASH DECK® SHINGLE BASE

Drawing: SHG – 01

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

