


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

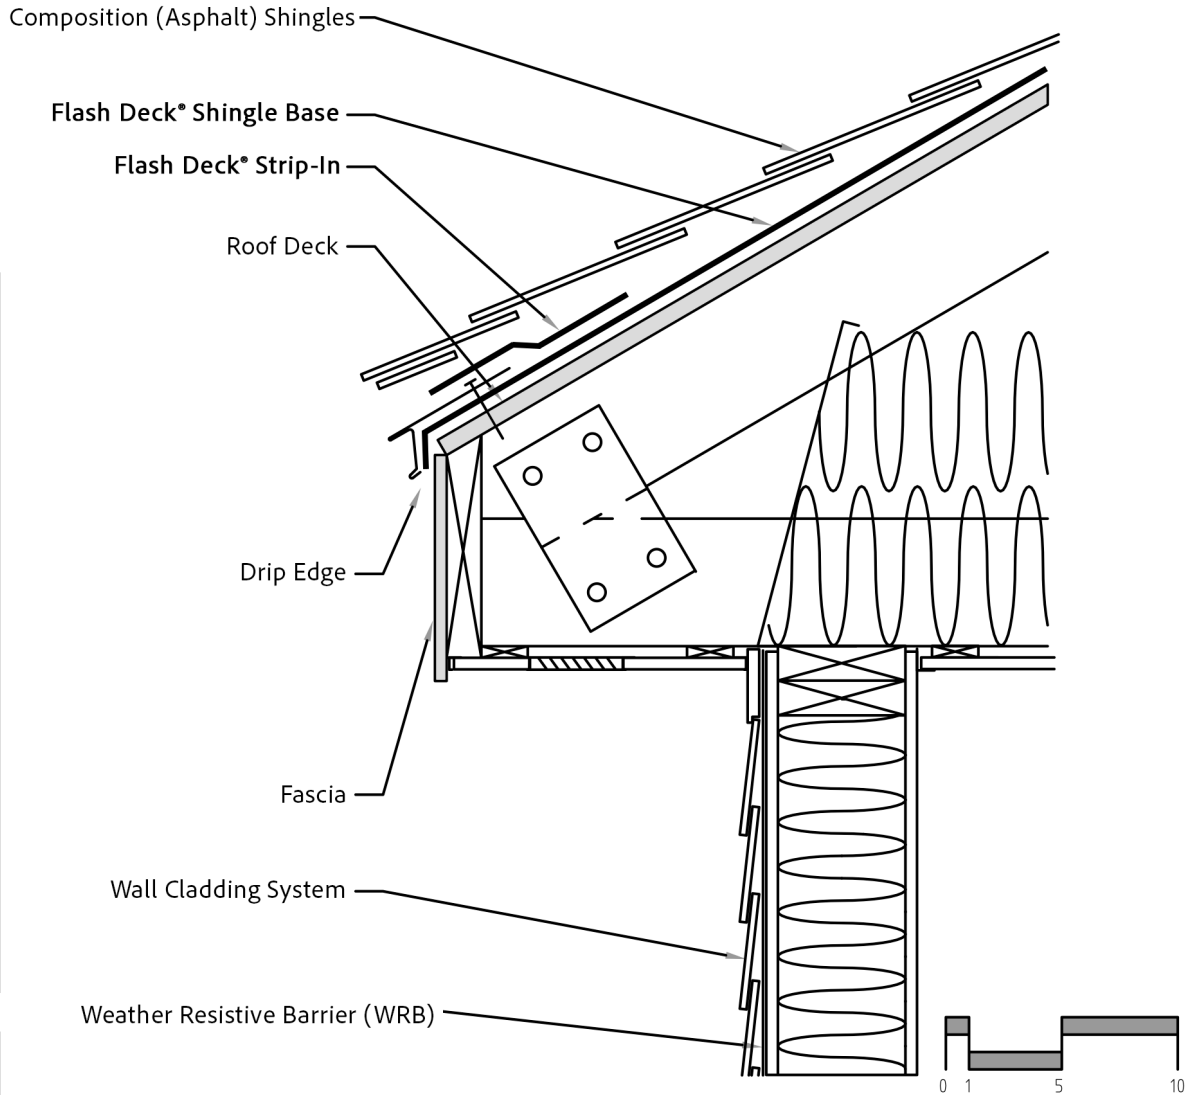

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE ONTO THE ROOF DECK. AND FASCIA, ENSURING IT REMAINS CONCEALED BEHIND THE DRIP EDGE FACE ONCE INSTALLATION IS COMPLETE.
- C. DRIP EDGE:** INSTALL THE DRIP EDGE OVER THE SHINGLE BASE.
- D. STRIP-IN:** INSTALL THE FLASH DECK® STRIP-IN STARTING FROM THE NOSE OF THE DRIP EDGE OR, AT A MINIMUM, ENSURE ALL FASTENERS ARE COVERED AND EXTENDING A MINIMUM OF 4" ONTO THE SHINGLE BASE.
- E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)

tech@roofersadvantage.com

www.roofersadvantage.com

SHINGLE EAVE DETAIL – ENHANCED FLASH DECK® SHINGLE BASE

Drawing: SHG – 02

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

