


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

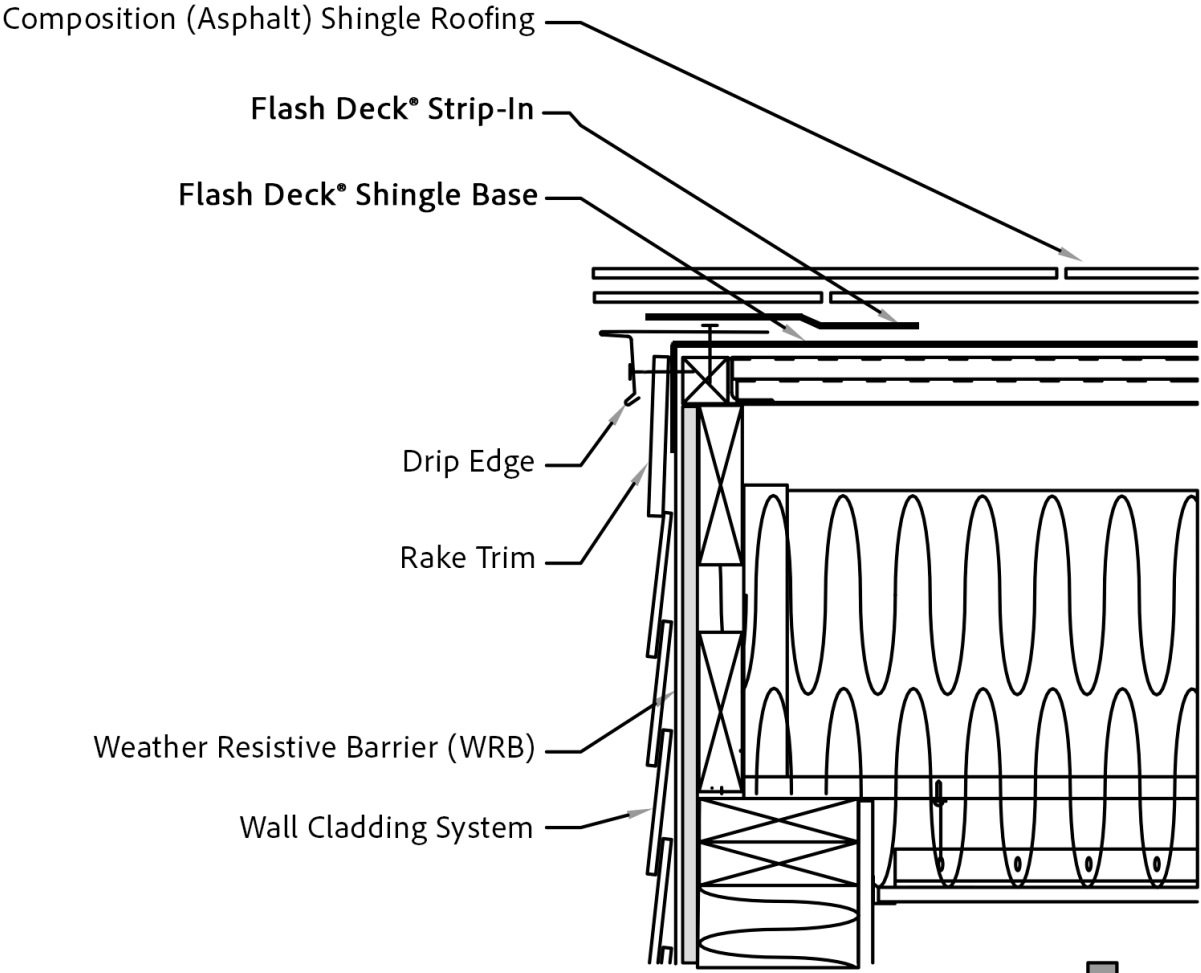


NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. SHINGLE BASE:** INSTALL FLASH DECK® SHINGLE BASE AT RAKE EDGE, TRIMMING FLUSH OR EXTENDING ONTO RAKE TRIMS AS REQUIRED.
- C. EXTENDED COVERAGE:** IF METAL TRIMS ARE INSTALLED DIRECTLY TO RAKE EDGE FRAMING, EXTEND SHINGLE BASE A MINIMUM OF 4" TO 6" ONTO FRAMING MEMBER, THEN CAP WITH METAL RAKE EDGE TRIM.
- D. DRIP EDGE:** INSTALL DRIP EDGE OR RAKE EDGE TRIM DIRECTLY OVER SHINGLE BASE.
- E. OPTIONAL ENHANCEMENT:** APPLY FLASH DECK® STRIP-IN OVER THE DRIP EDGE NAIL FLANGE TO ENSURE ALL FASTENERS ARE FULLY ENCAPSULATED.
- F. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.



Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

RAKE EDGE DETAIL— NEW TRIM

FLASH DECK® SHINGLE BASE

Drawing: SHG – 05

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

