


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

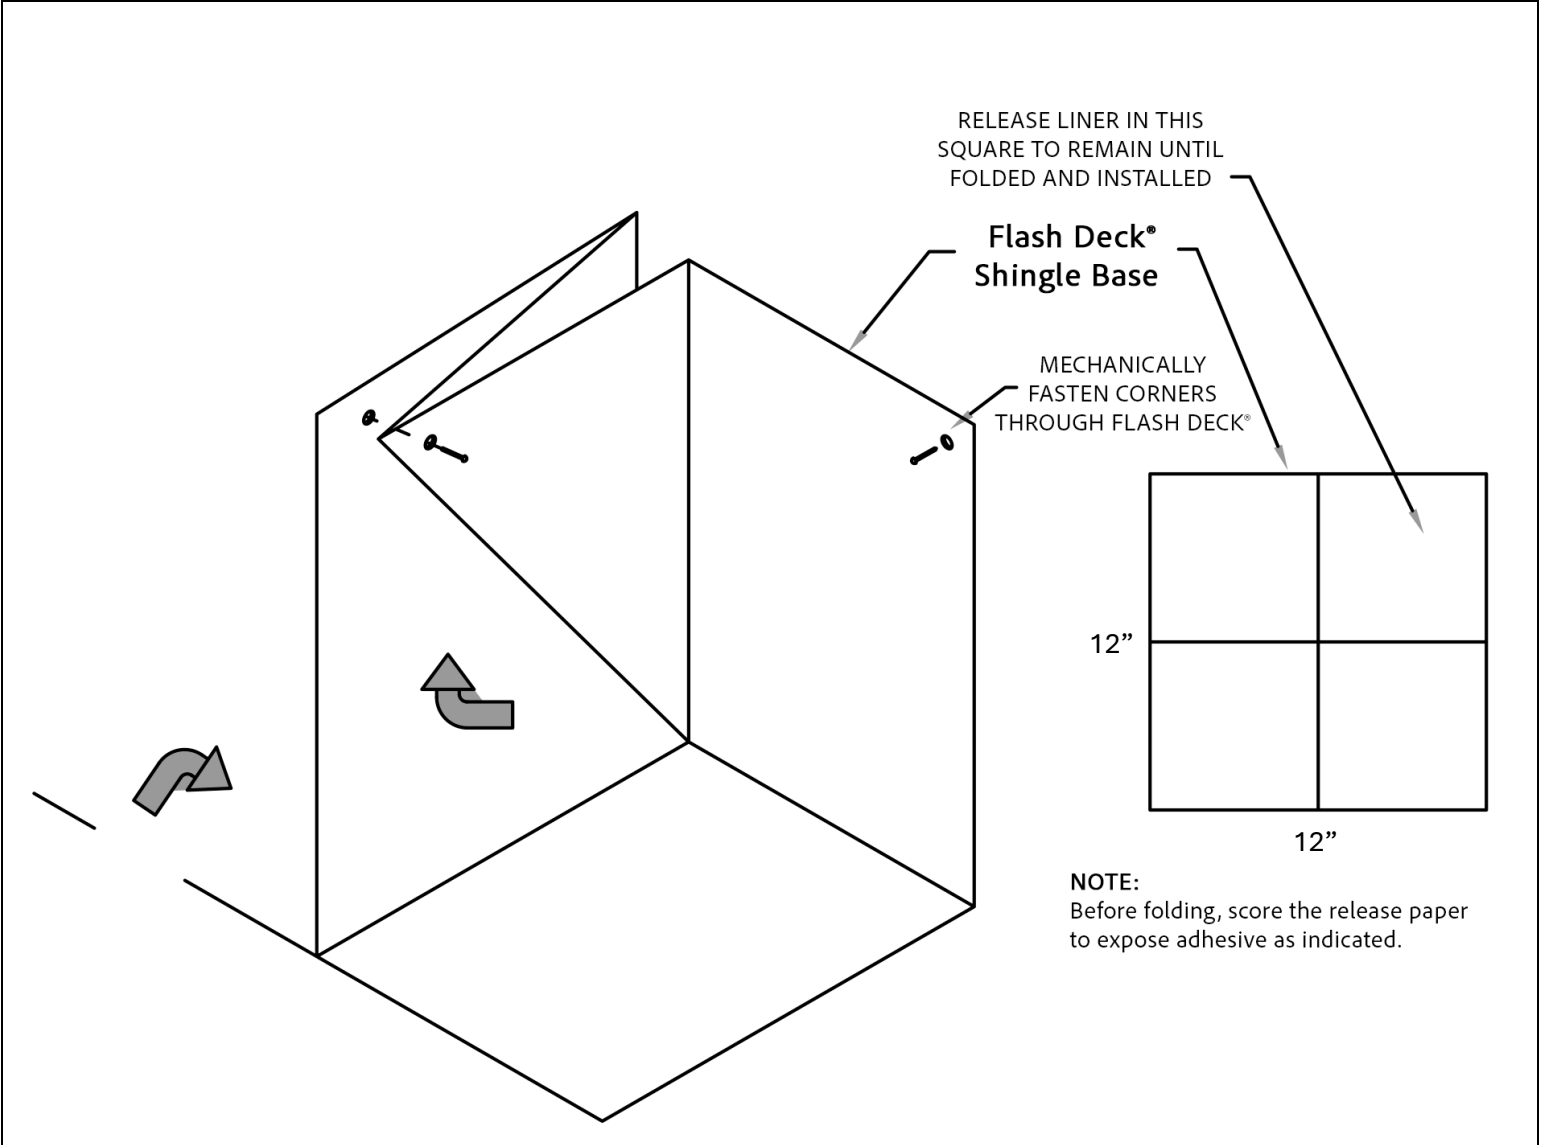

NOTES:

- A. PREPARATION: ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
 - B. INSTALLATION: CUT 12" X 12" (305 X 305 MM) FLASH DECK® SHINGLE BASE SQUARE; SCORE RELEASE LINER AS SHOWN. KEEP CORNER RELEASE LINER FOLDED UNTIL ANGLES ARE DETERMINED AND DETAIL IS SUBSTANTIALLY INSTALLED; OVERLAP DECK-INSTALLED SHINGLE BASE BY MINIMUM OF 4".
 - C. BONDING: APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.
- PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT ROOFERSADVANTAGE.COM TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.
- GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc. 4 Valhalla Way, Wakefield, NH 03872 +1(888)-YELO-NOW (935-6669) tech@roofersadvantage.com www.roofersadvantage.com	INSIDE CORNER DETAIL– WALL TO DECK FLASH DECK® SHINGLE BASE	Drawing: SHG – 07	Get Butyl Deck Certified:
		Scale: NOT TO SCALE	
		Created: 08/01/2026	
		Supersedes: N/A	