


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

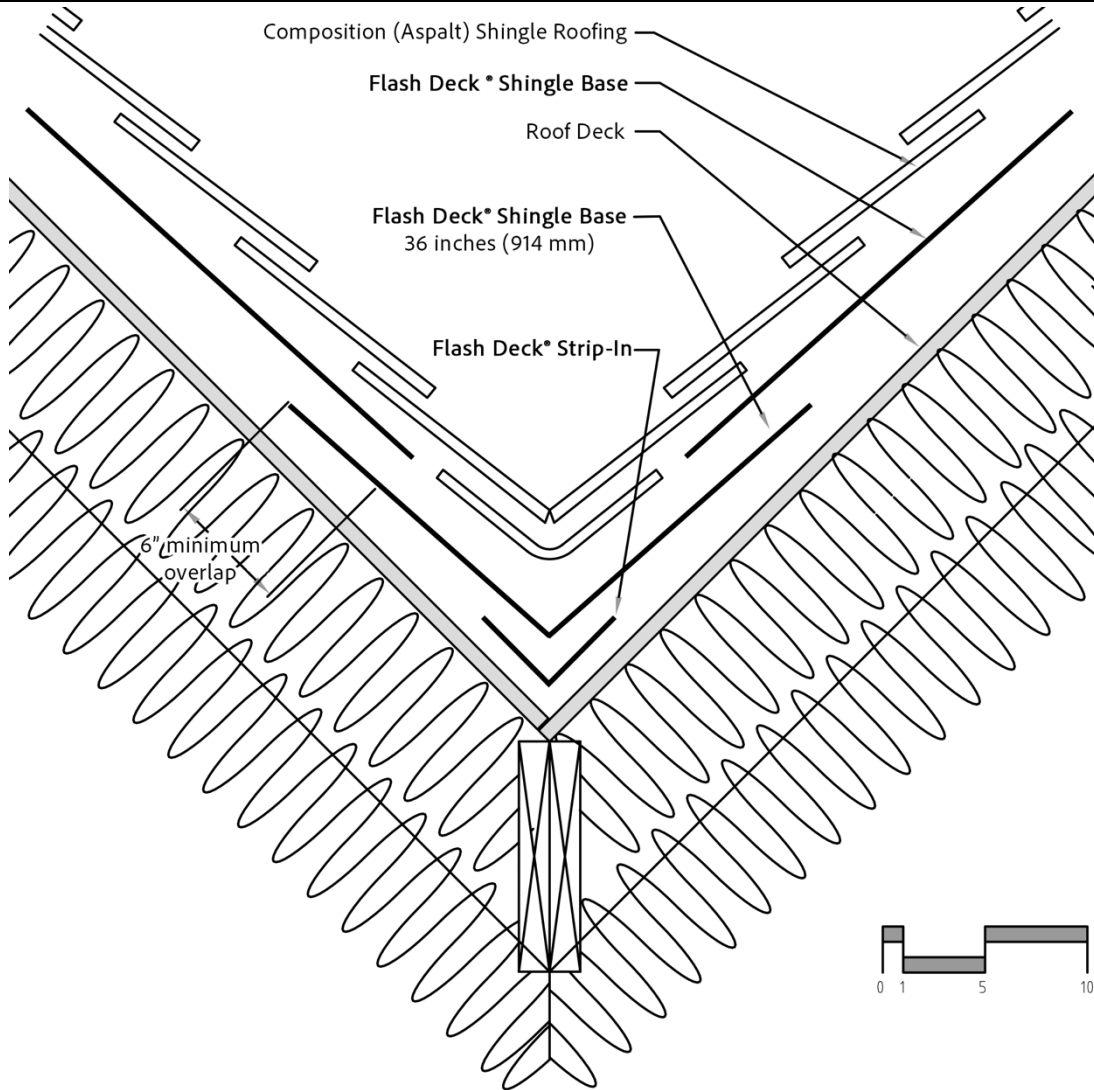

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. SEQUENCE:** INSTALL FLASH DECK® STRIP-IN PRIOR TO FLASH DECK® SHINGLE BASE.
- C. CUT AND FIT:** CUT TO MANAGEABLE LENGTHS. WORK WITH SECOND INSTALLER TO ADHERE FROM EAVE UP TOWARD RIDGE; ENSURE 6" MINIMUM OVERLAP AT EACH JOINT. SECOND INSTALLER REMOVES RELEASE LINER WHILE INSTALLER AT EAVE ROLLS MATERIAL INTO PLACE.
- D. VALLEY ALIGNMENT:** WORKING WITH A PARTNER, CUT SHINGLE BASE TO A MANAGEABLE LENGTH. FOLD SHINGLE BASE IN HALF THE LONG WAY AND REMOVE THE SPLIT RELEASE LINER FROM ONE SIDE; SLIDE INTO THE VALLEY.
- E. SHINGLE BASE APPLICATION:** INSTALL ONE SIDE FIRST, THEN INSTALL THE OTHER SIDE, ROLLING FIRMLY INTO PLACE ONTO THE STRIP-IN TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

VALLEY DETAIL

FLASH DECK® SHINGLE BASE

Drawing: SHG – 09

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

