


SHINGLE BASE


BUTYL DECK SYSTEM | INSTALLATION DETAILS

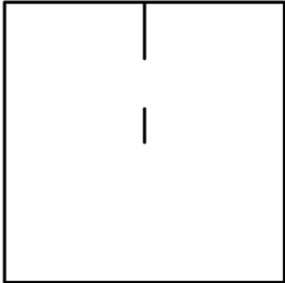



PATCH "A"




PATCH "B"

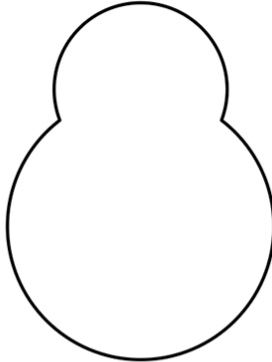


PATCH "C"

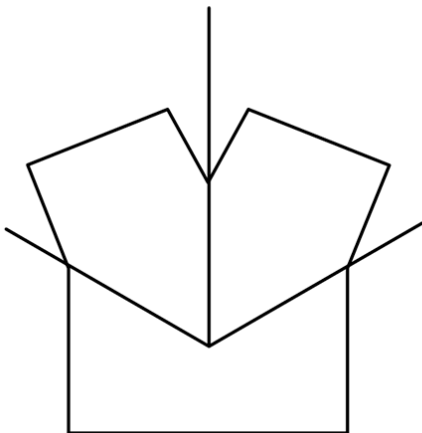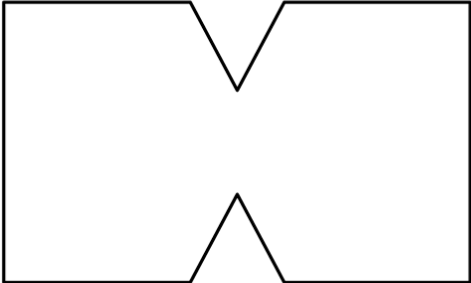

PATCH "A"
INSTALLED AT CORNER

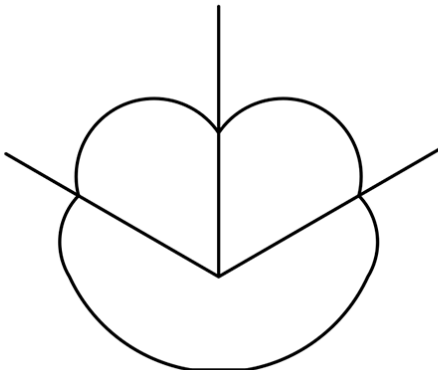

PATCH "B"
INSTALLED AT CORNER

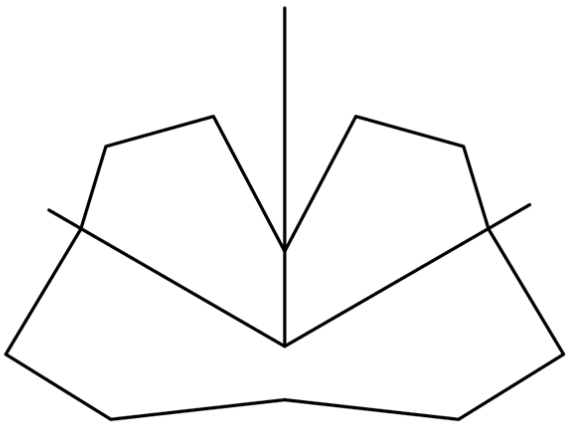

PATCH "C"
INSTALLED AT CORNER

NOTES:

- A. PREPARATION:** ENSURE THE SUBSTRATE IS CLEAN, DRY, AND FREE OF DEBRIS.
- B. PATCH PREP:** THE NORMAL PATCH SIZE IS 6" X 6" (150 BY 150 MM); IN SEVERE WEATHER REGIONS, PATCH SIZE SHOULD BE 12" X 12" (305 BY 305 MM).
- C. APPLICATION:** APPLY OVER THE CORNER TRANSITION, WORKING THE MATERIAL INTO THE PROFILE TO AVOID VOIDS.
- D. RELEASE LINER:** REMOVE RELEASE LINER AT TIME OF INSTALLATION. **E. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

CORNER FLASHING PATCH DETAIL

FLASH DECK® SHINGLE BASE

Drawing: SHG – 10

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

