


SHINGLE BASE

BUTYL DECK SYSTEM | INSTALLATION DETAILS

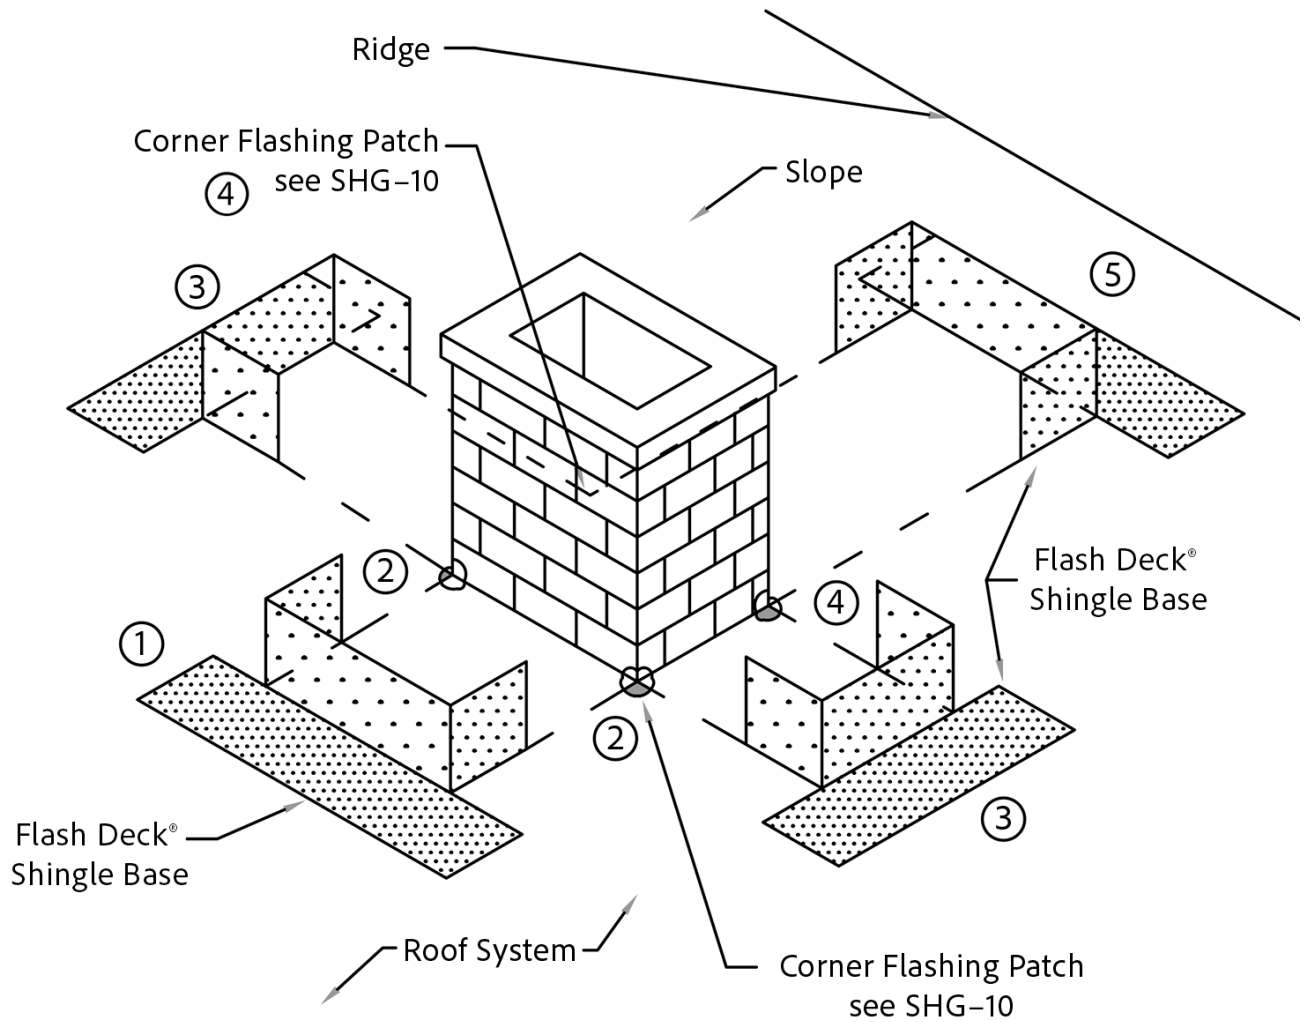

NOTES:

- A. PREPARATION:** ENSURE THE ROOF DECK AND WALL SHEATHING IS CLEAN, DRY, AND FREE OF DEBRIS. ON MASONRY CHIMNEYS, BRICKS MUST BE CLEAN AND DRY.
- B. BASE INTEGRATION:** INSTALL FLASH DECK® SHINGLE BASE AROUND CHIMNEY BASE, FOLLOW NUMBERING (1-5).
- C. CORNER HANDLING:** UTILIZE THE "CORNER FLASHING PATCH" METHOD (SHG-10) AT ALL CHIMNEY CORNERS LAPPED ACCORDINGLY WITH NO GAPS.
- D. CAULKING/SEALANT:** APPLY CAULKING/SEALANT ALONG TOP EDGE AND CORNERS OF SHINGLE BASE.
- E. STRIP-IN:** ON WOOD FRAME CONSTRUCTION, APPLY FLASH DECK® STRIP-IN ONTO VERTICAL LEG OF FLASHINGS, EXTENDING UP CHIMNEY SURFACE. OVERLAP DETAIL WITH WEATHER-RESISTIVE BARRIER (WRB).
- F. BONDING:** APPLY FIRM PRESSURE USING A HAND ROLLER TO ACTIVATE THE ADHESIVE BOND.

PROFESSIONAL SUPPORT: FOR COMPREHENSIVE TECHNICAL SPECIFICATIONS AND TO ACCESS OUR SPECIFIC INSTALLATION PROTOCOLS, PLEASE VISIT [ROOFERSADVANTAGE.COM](https://www.roofersadvantage.com) TO "GET CERTIFIED" OR CONTACT OUR TEAM DIRECTLY FOR PROFESSIONAL TECHNICAL SUPPORT.

GENERAL NOTE: INSTALL ROOFING AND FLASHING DETAILS IN STRICT COMPLIANCE WITH THE PRIMARY ROOFING MANUFACTURER'S PRINTED APPLICATION INSTRUCTIONS, WHILE MAINTAINING THE CONTINUOUS WATER-SHEDDING FUNCTIONALITY OF THE FLASH DECK® UNDERLAYMENT SYSTEM.

Roofers' Advantage® Products, Inc.

4 Valhalla Way, Wakefield, NH 03872
+1(888)-YELO-NOW (935-6669)
tech@roofersadvantage.com

www.roofersadvantage.com

CHIMNEY FLASHING DETAIL

FLASH DECK® SHINGLE BASE

Drawing: SHG - 11

Scale: NOT TO SCALE

Created: 08/01/2026

Supersedes: N/A

Get Butyl Deck Certified:

